

 
 
1490

LEGOLAND®

LEGO



20552

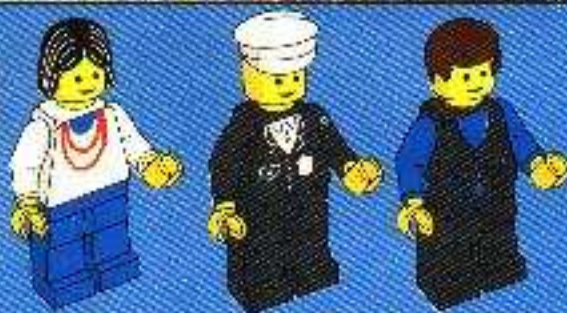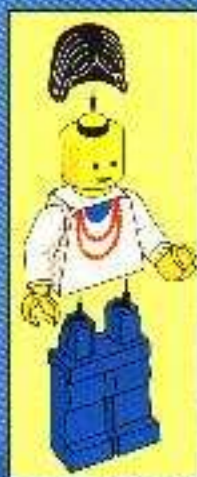

4



5



6

 





7




8

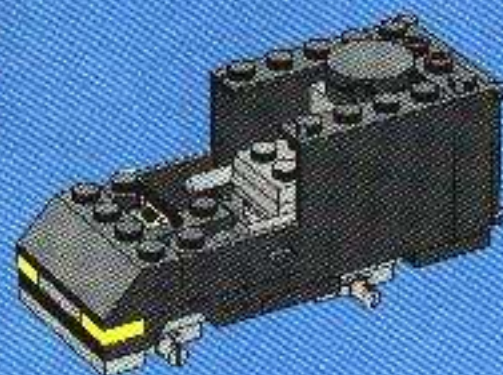



9

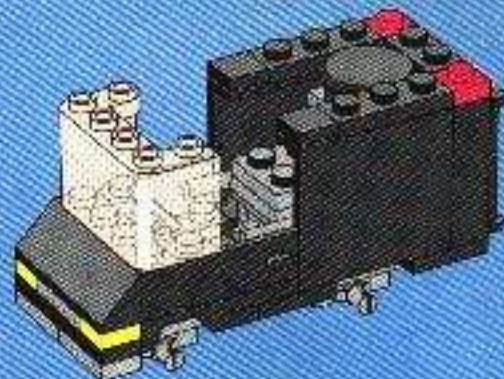 




10

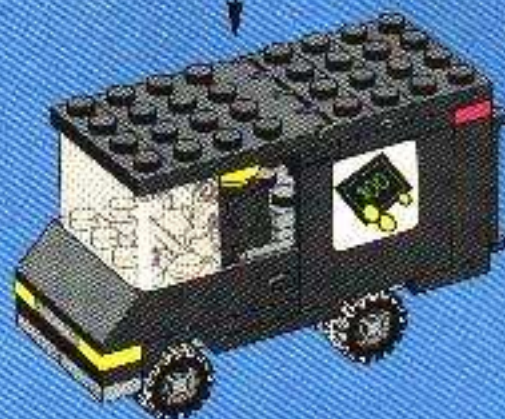 


1

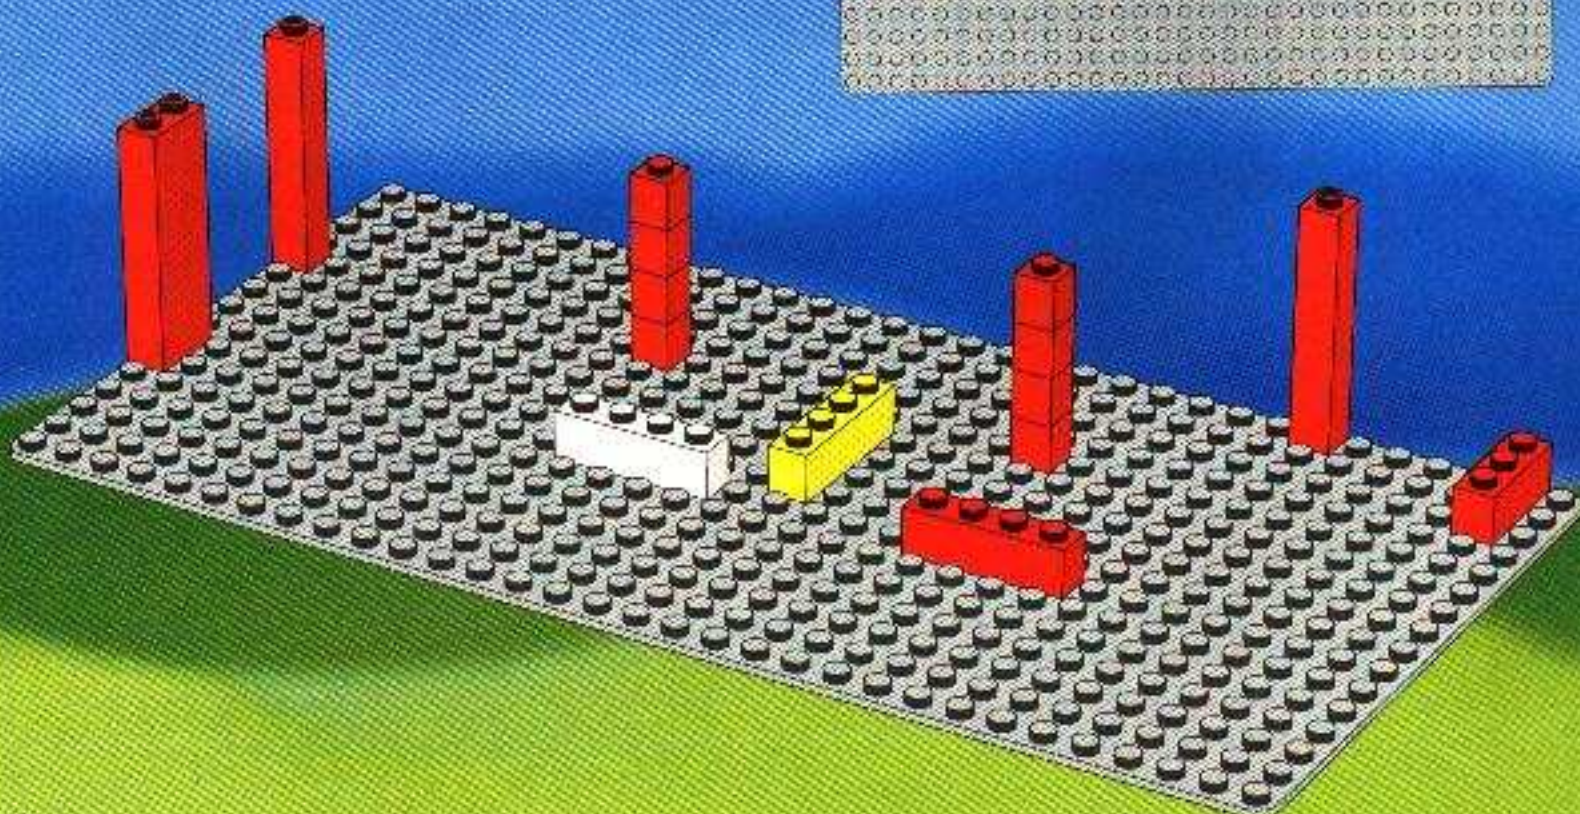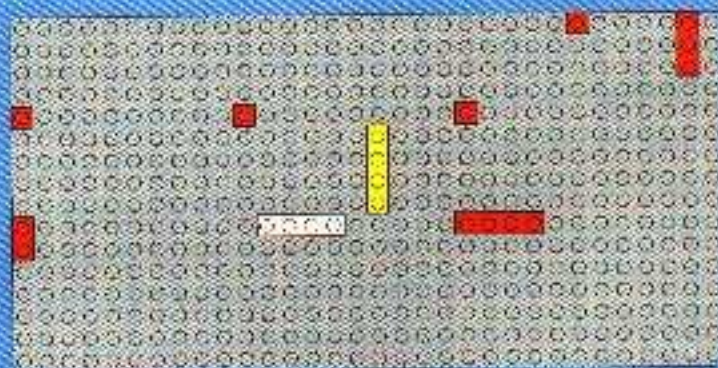  





2

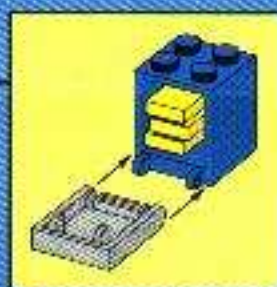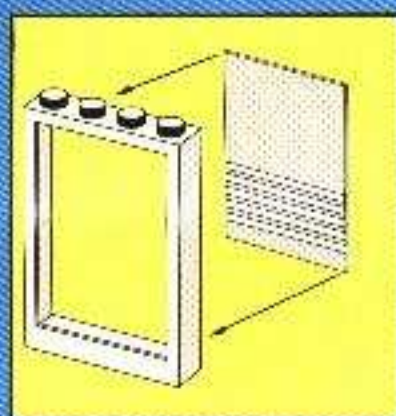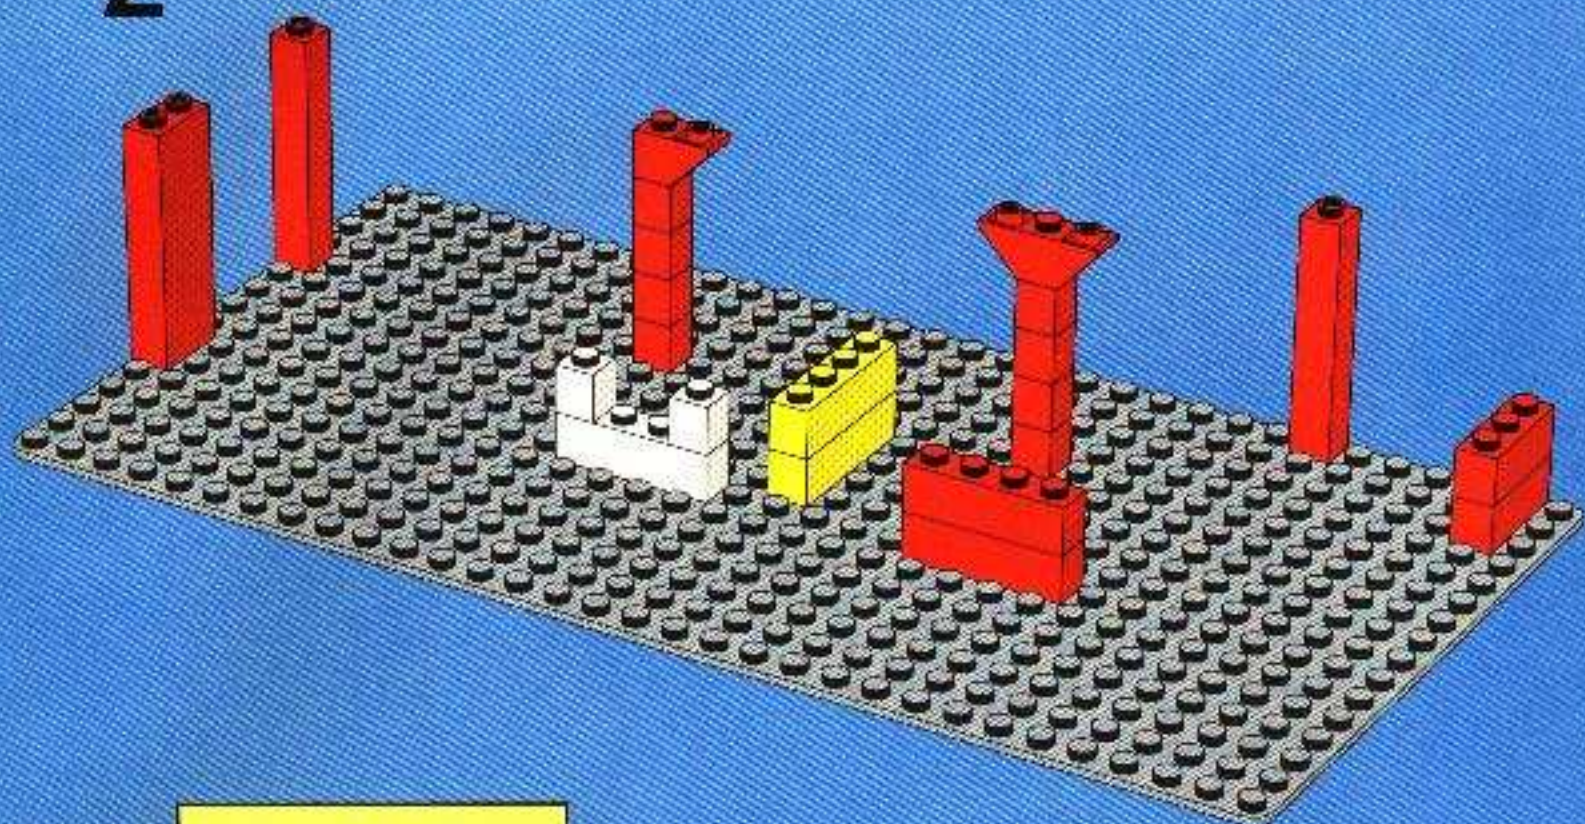   


3

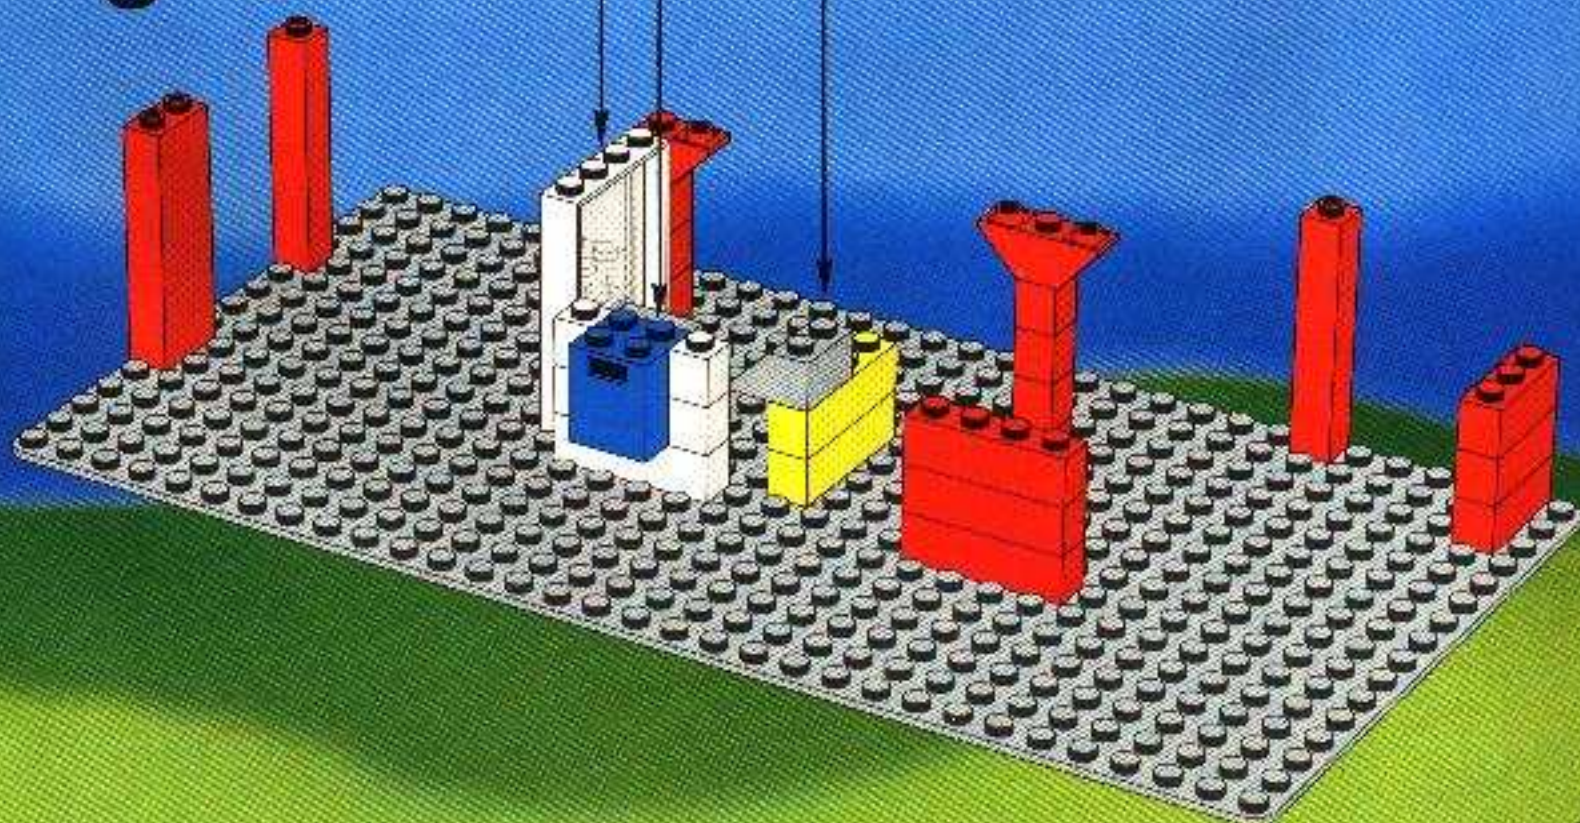 



4

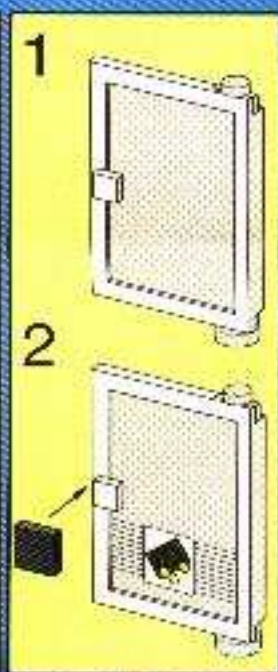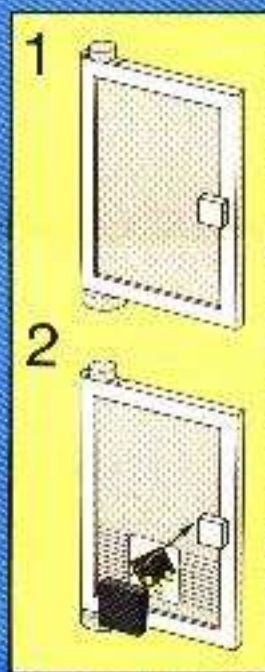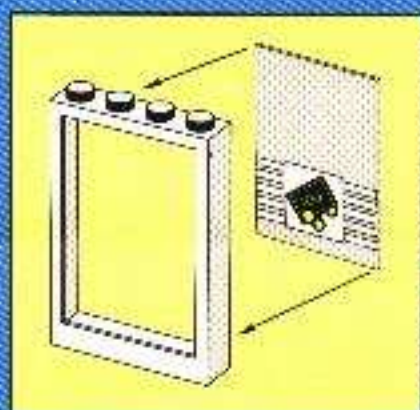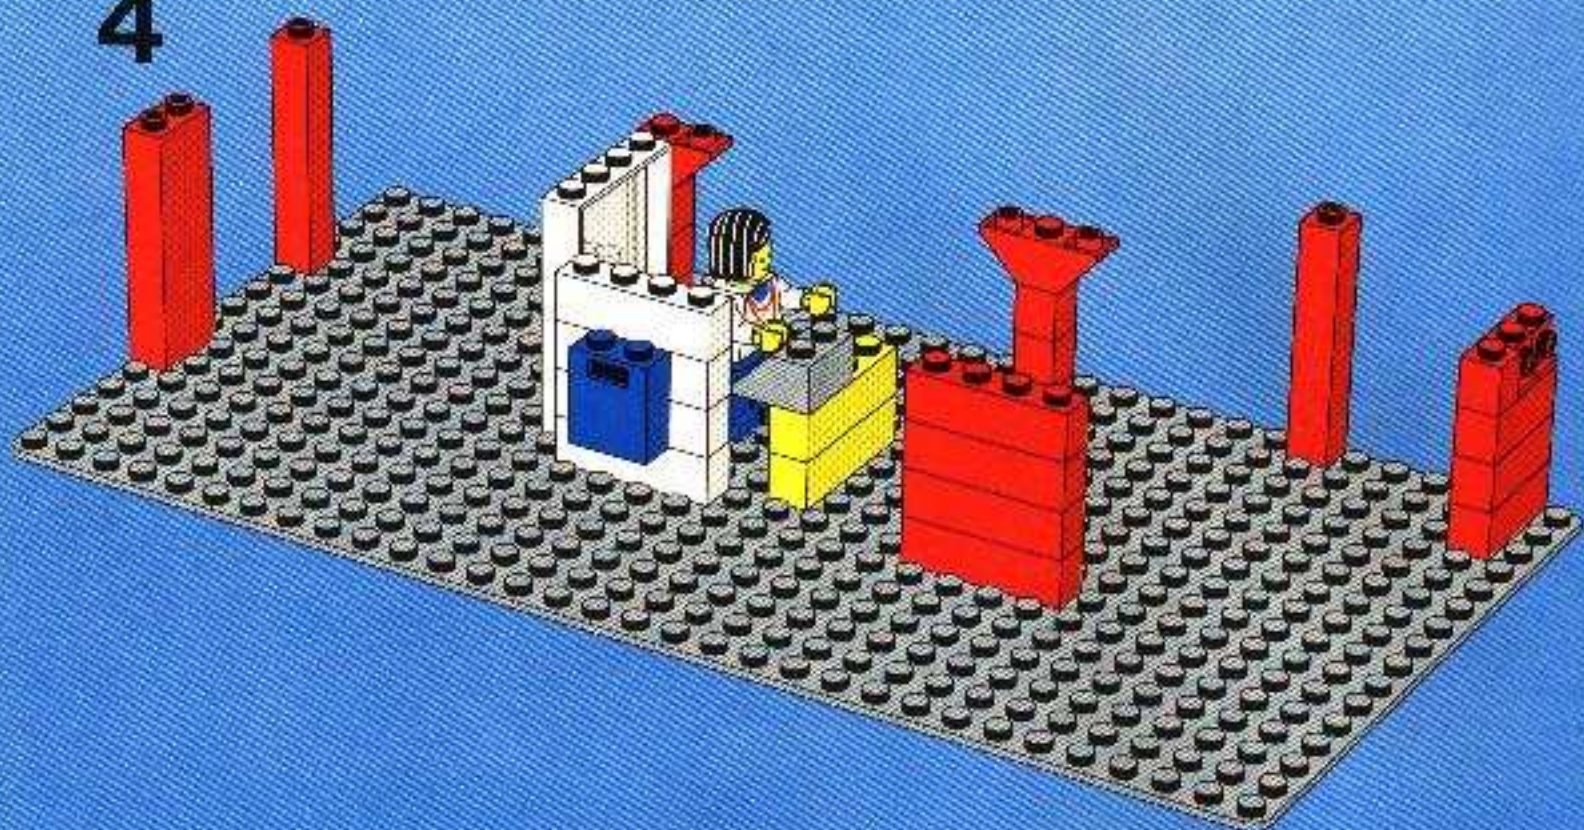    


5

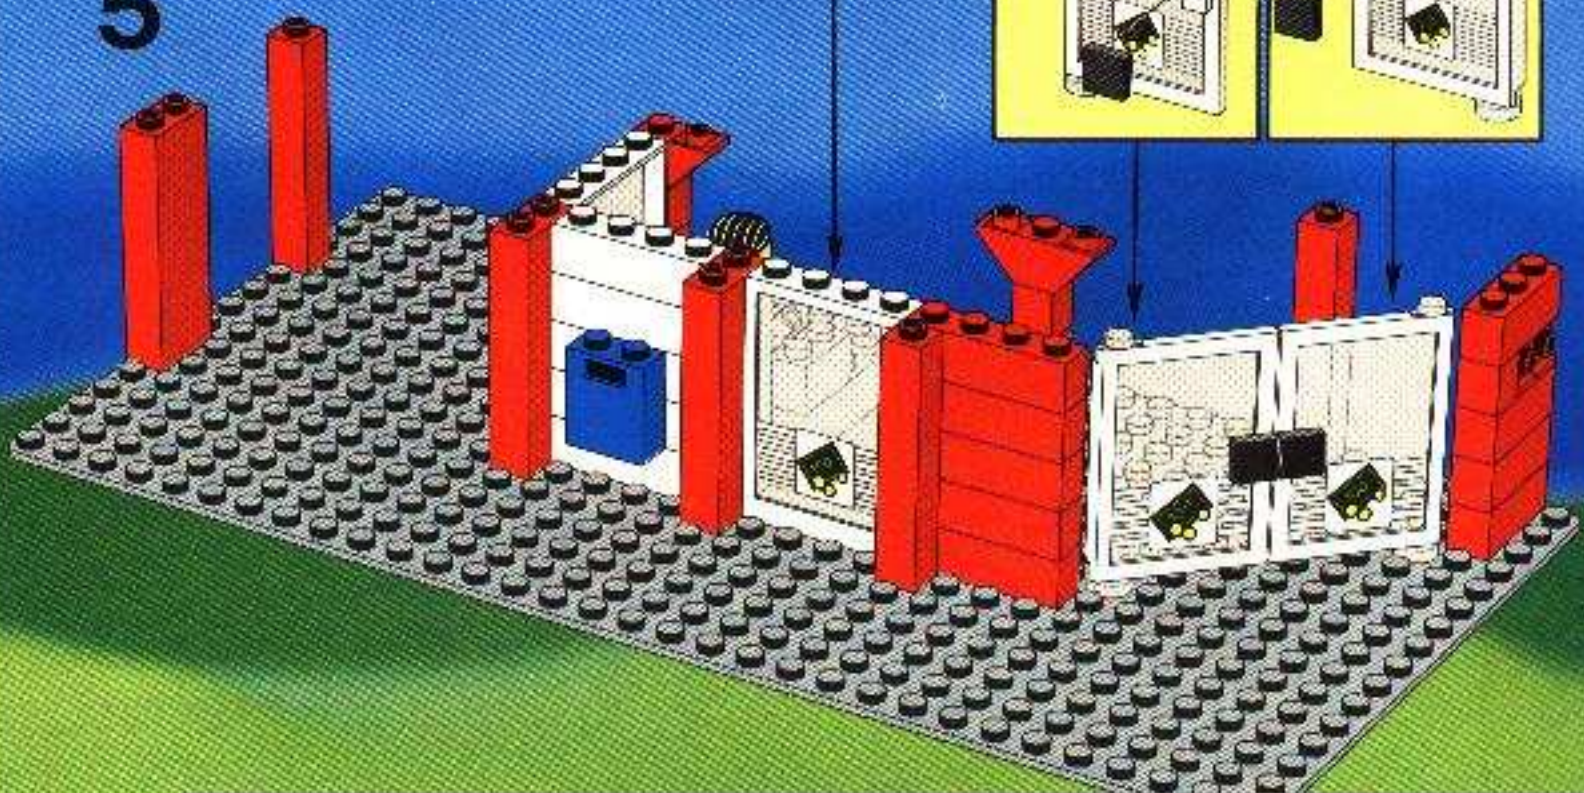 


6

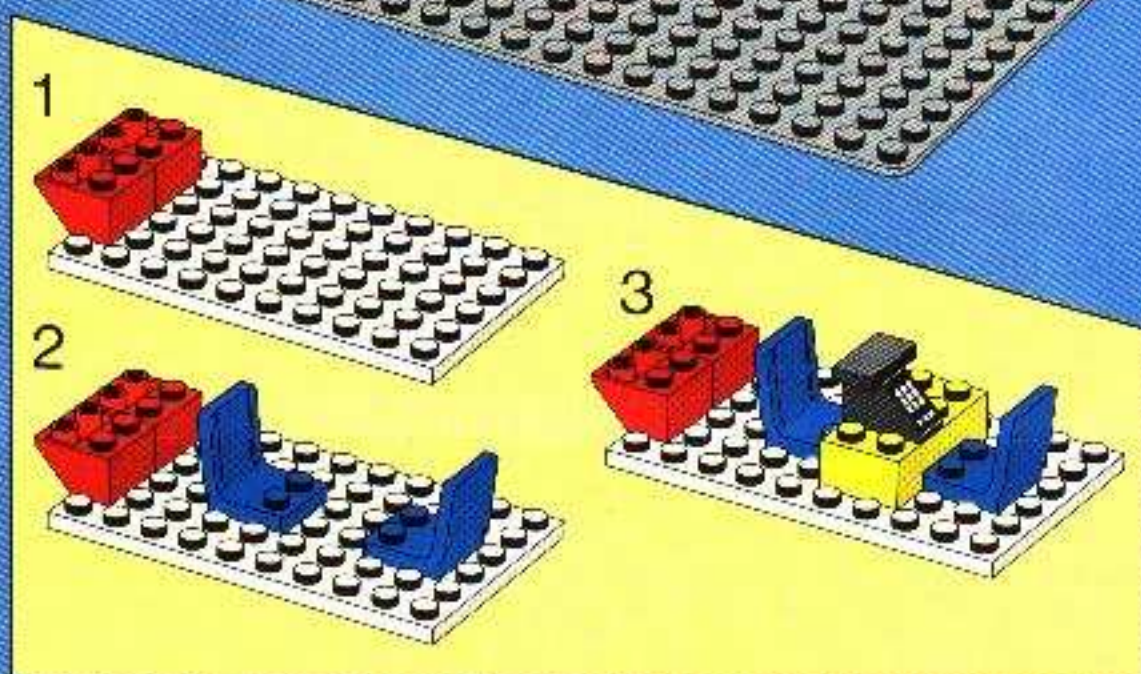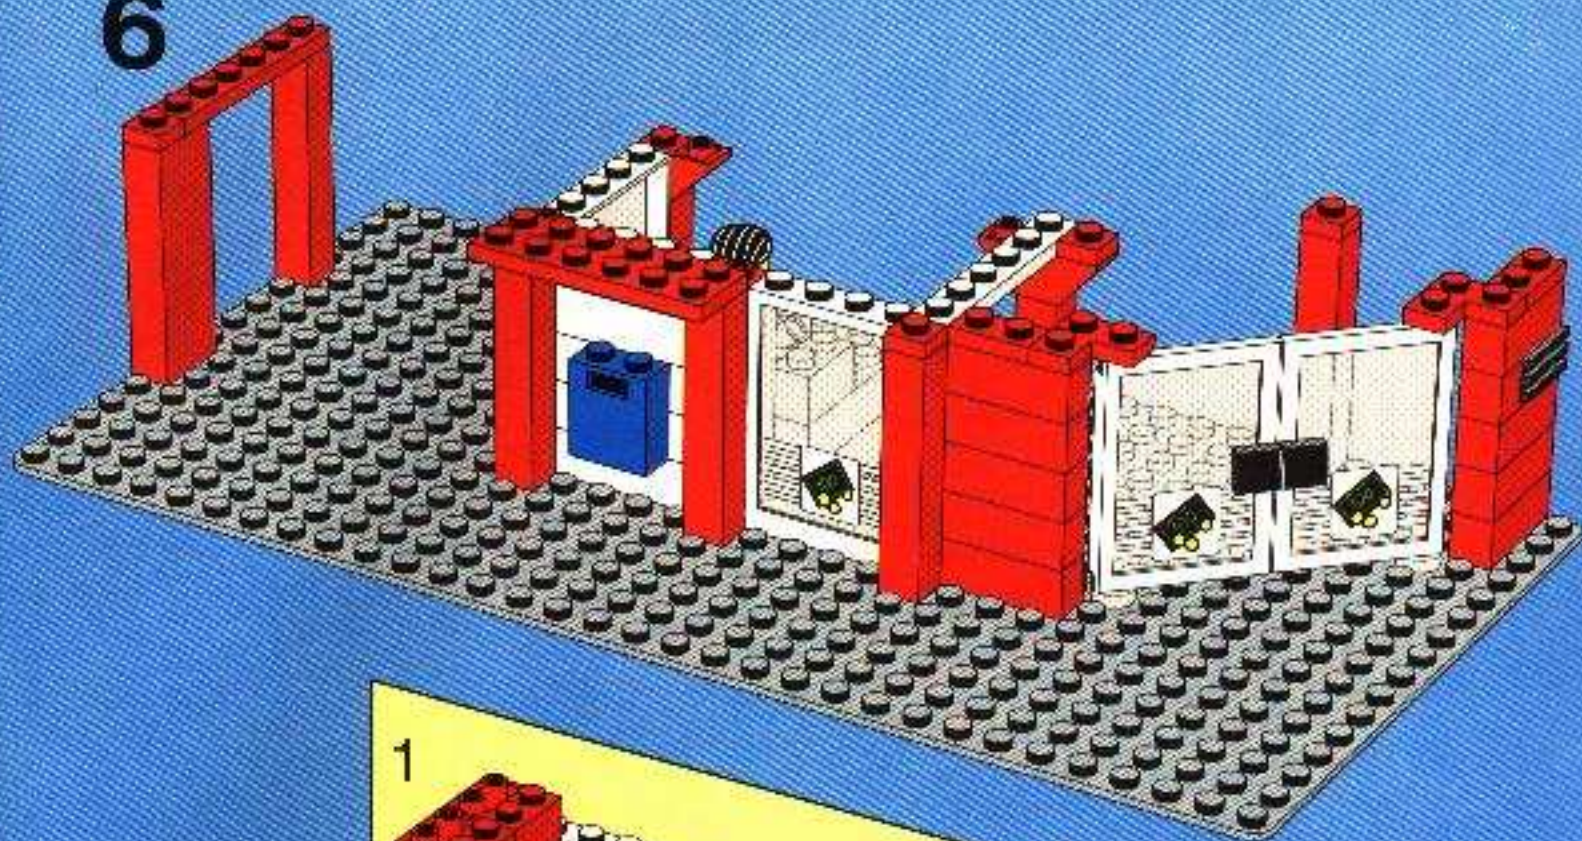  


7

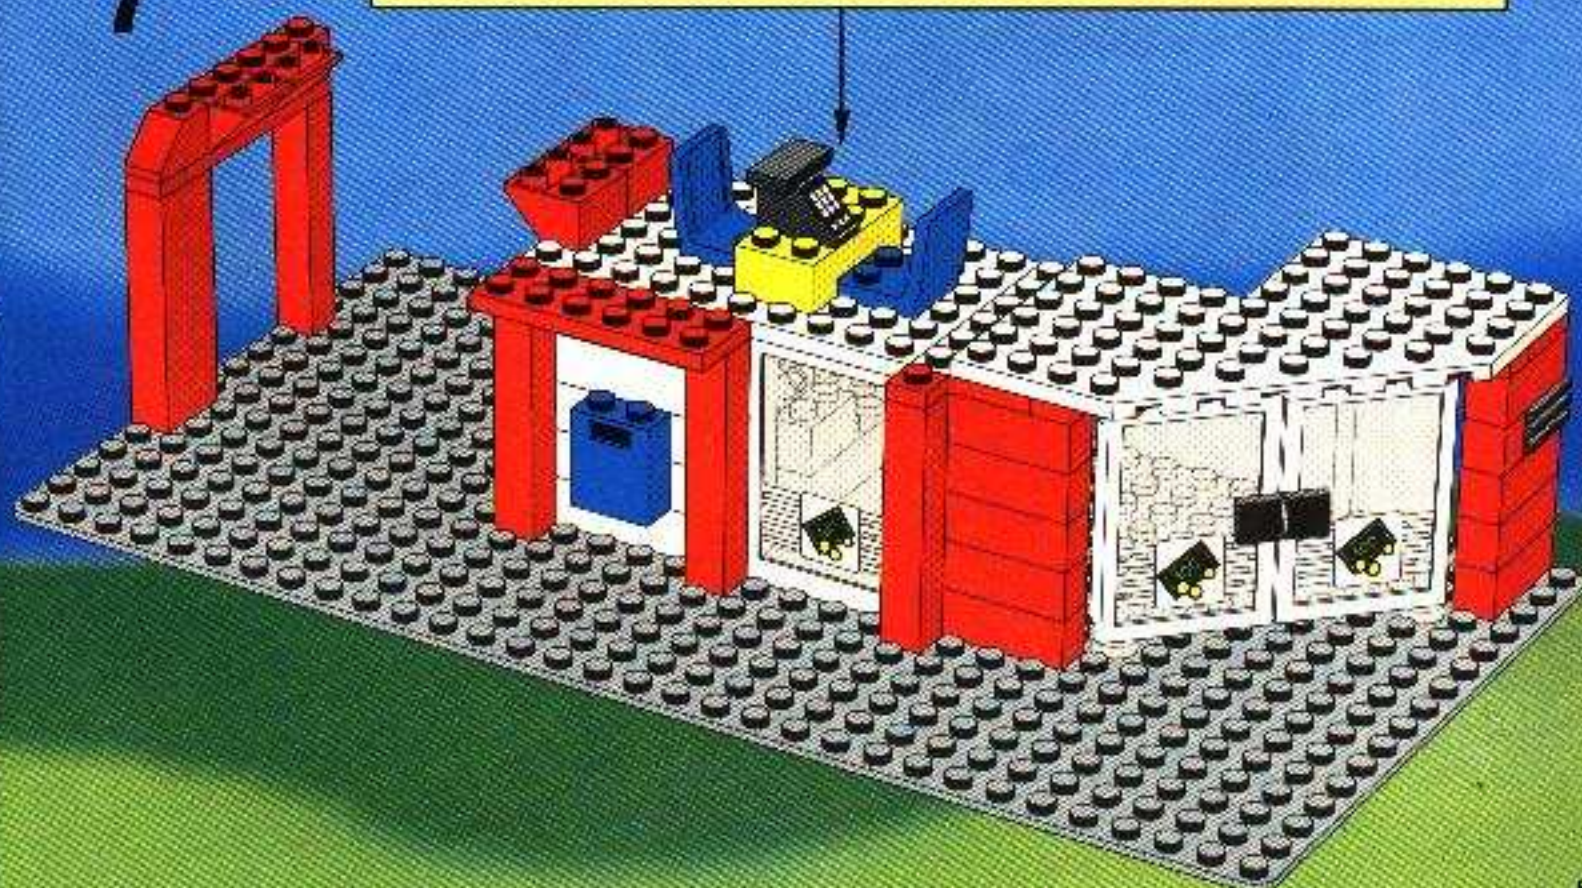 


8

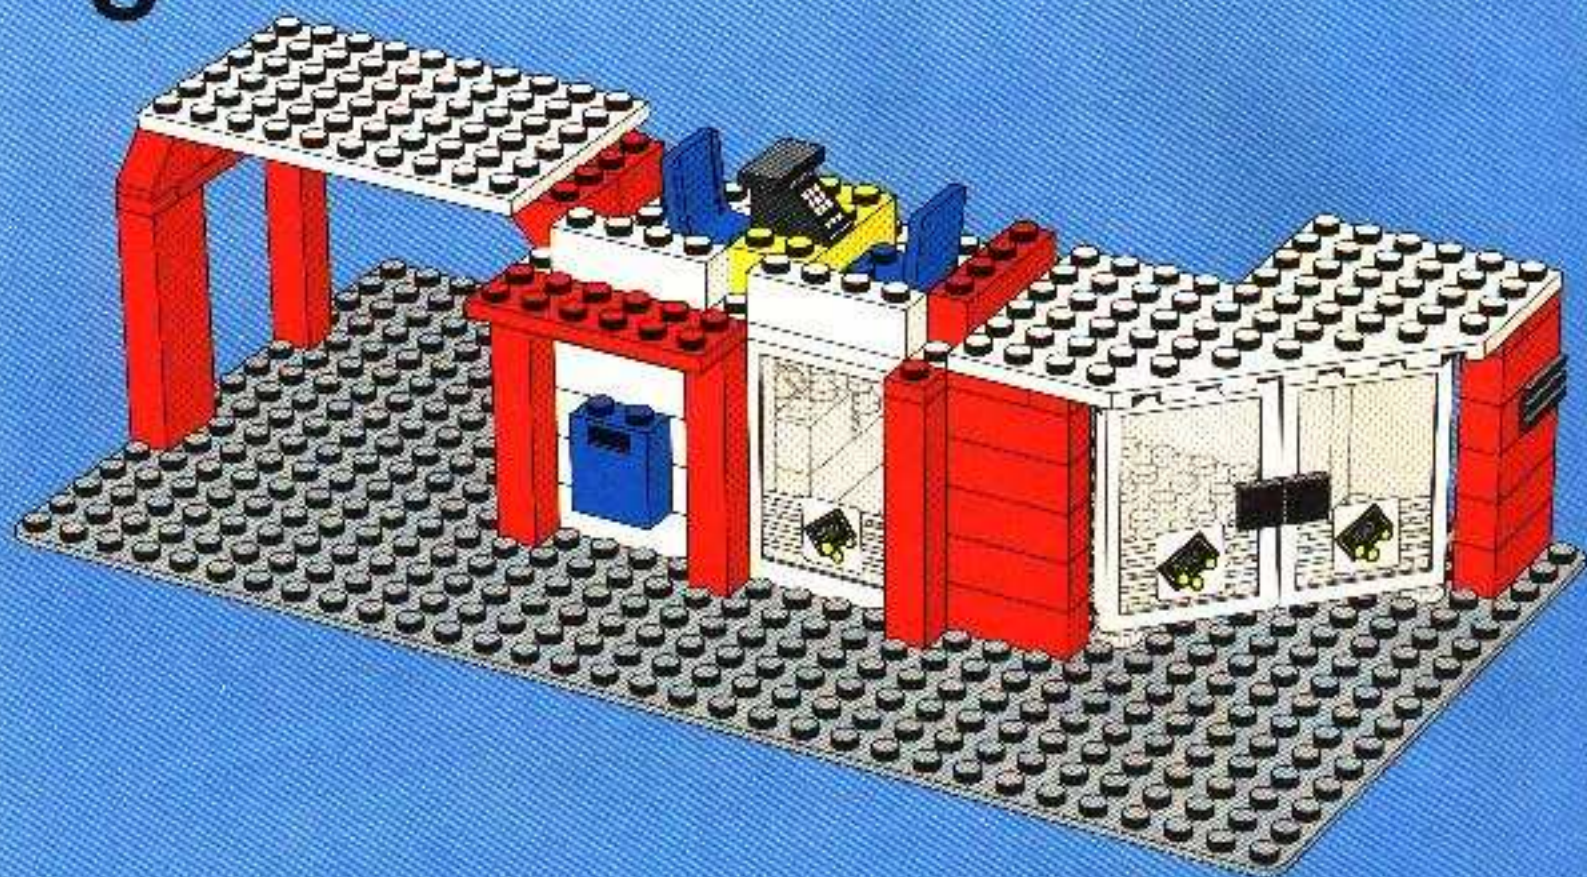 


9

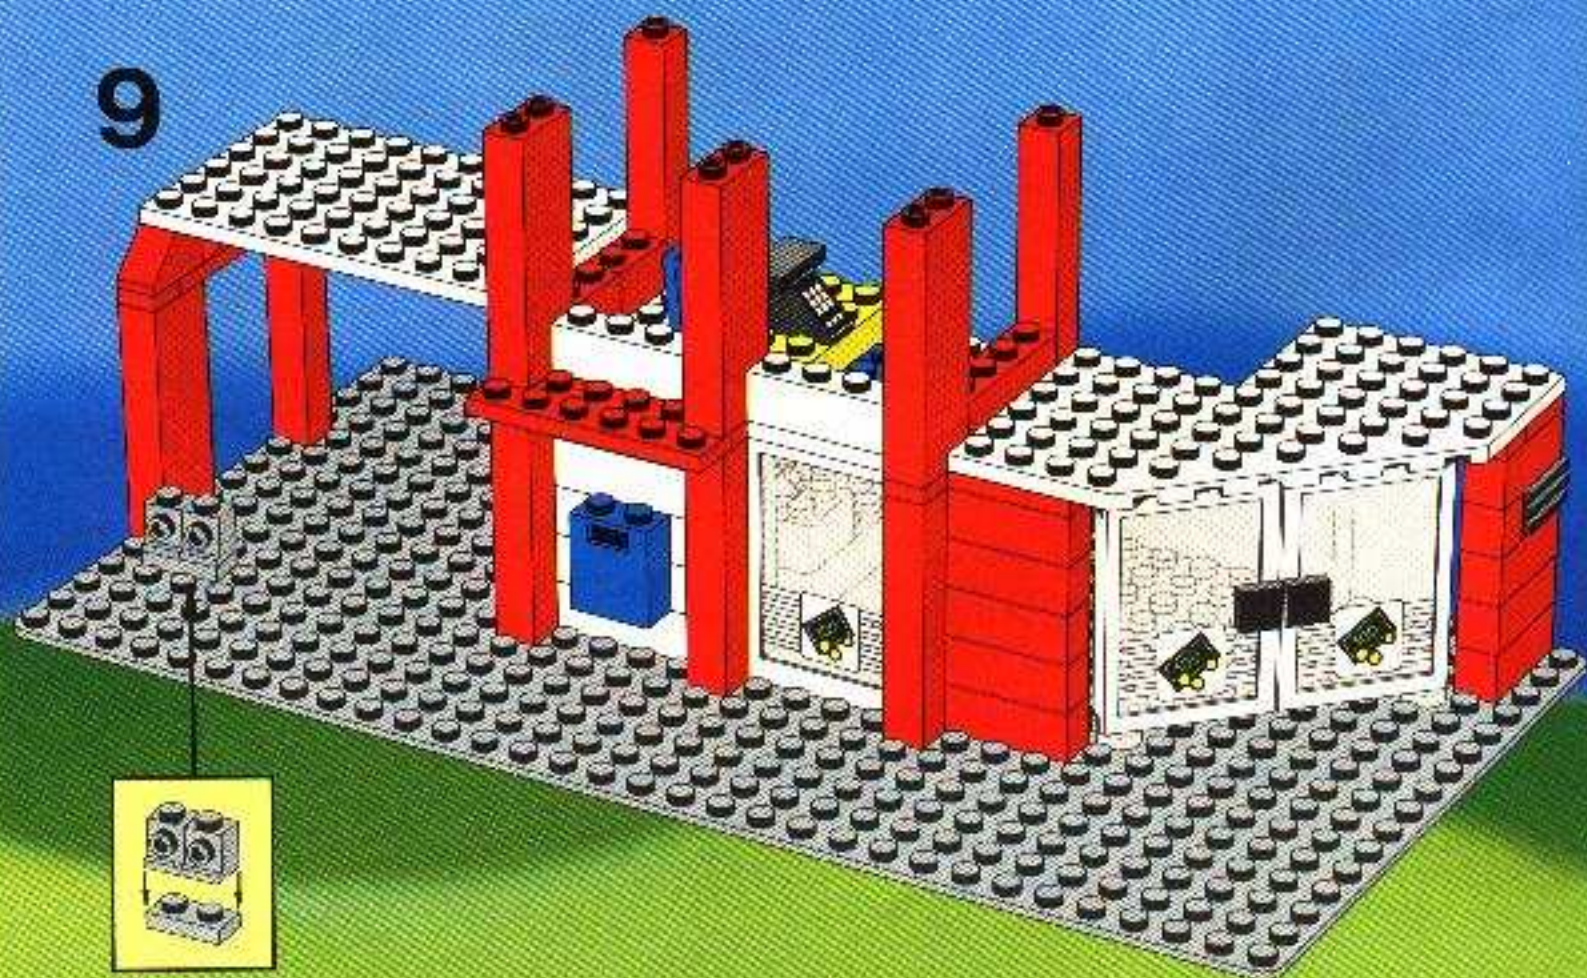 

10

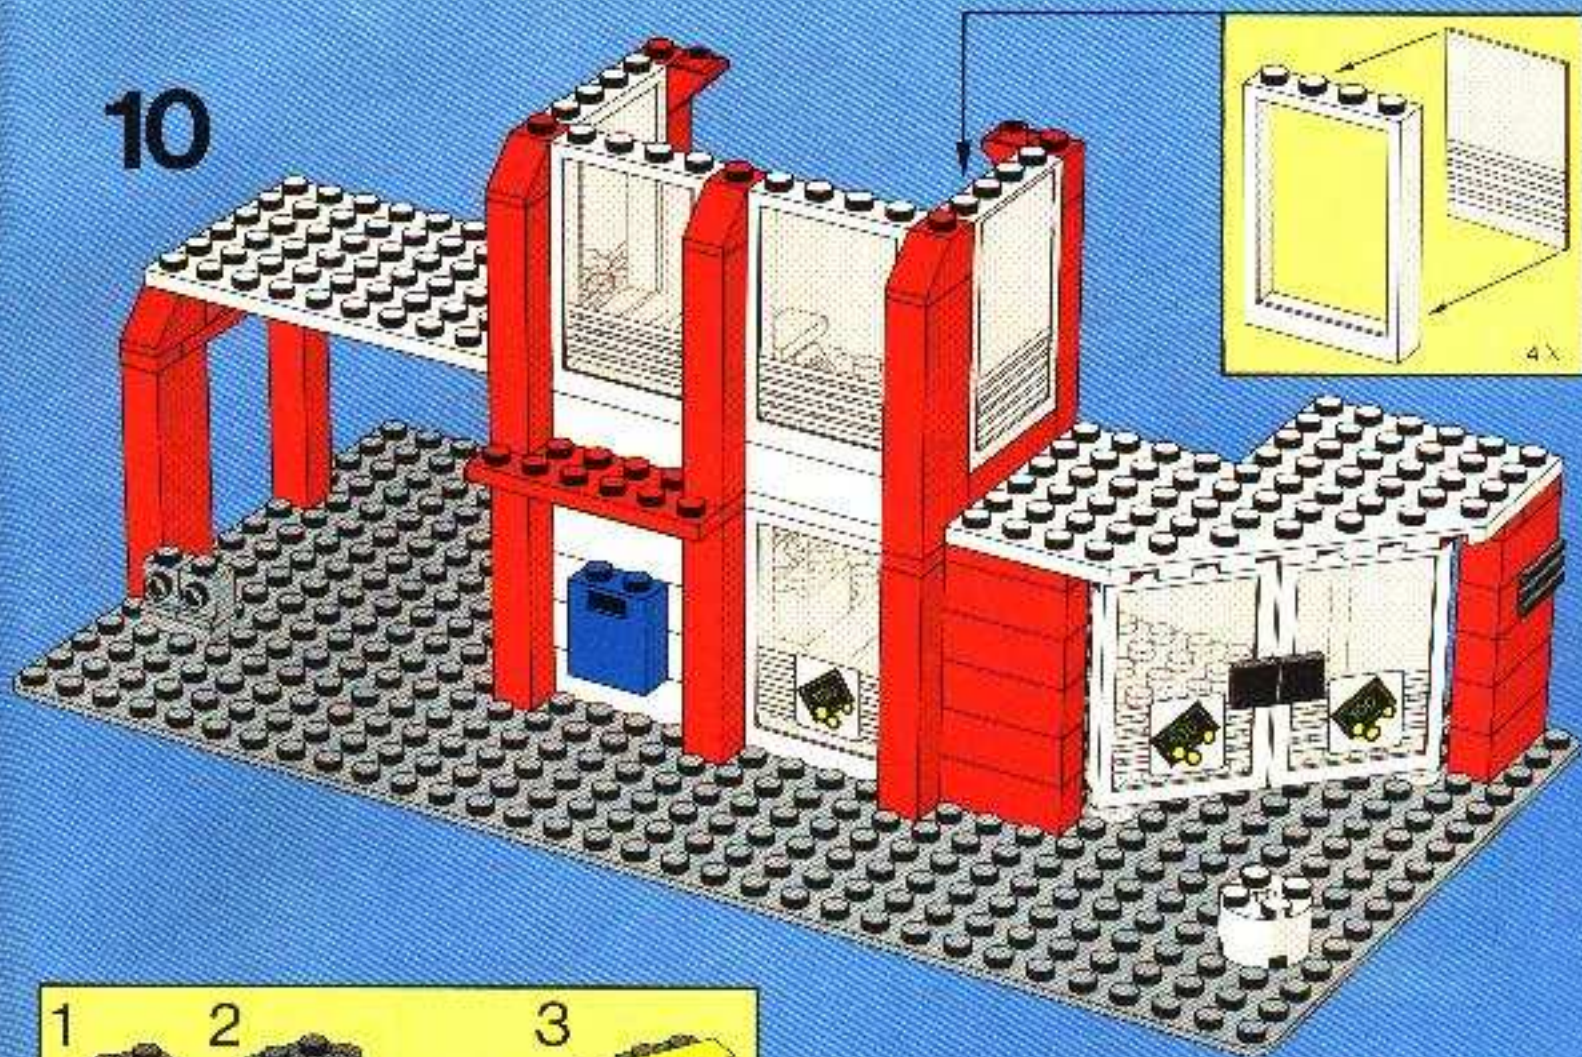 

11

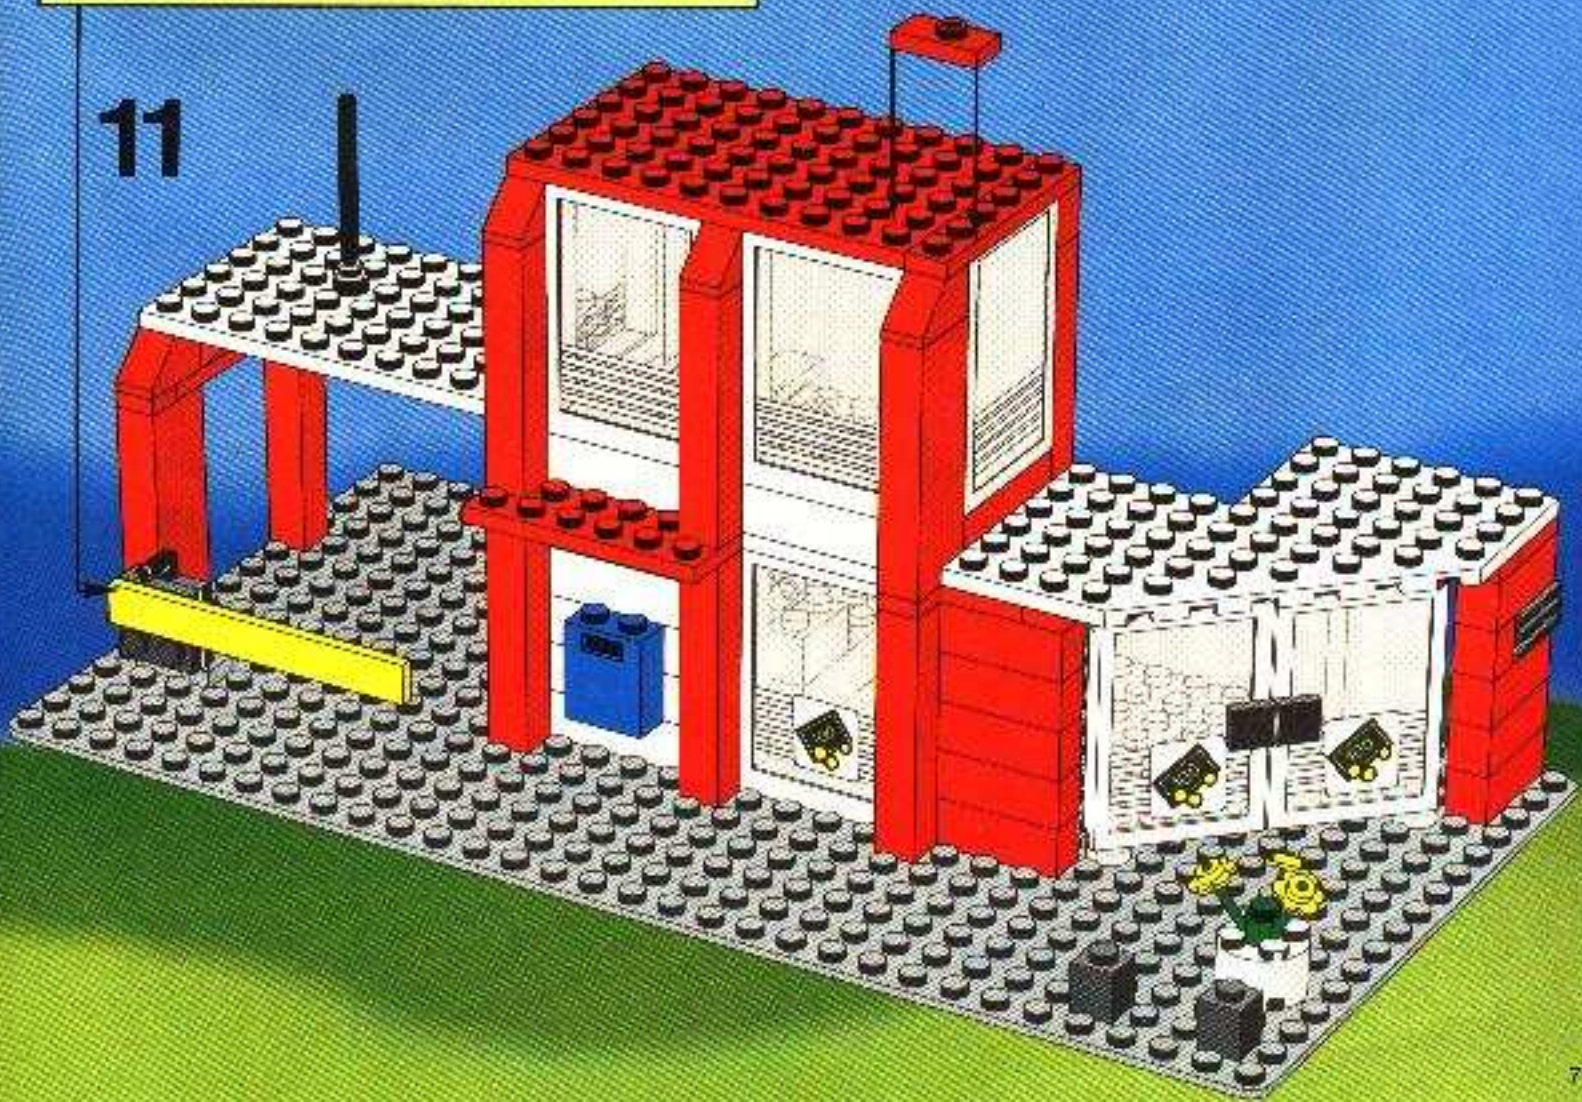 

12

