

6354

LEGOLAND®

LEGO



120064



1



2



3



1



2



3



4



 
5



6




7

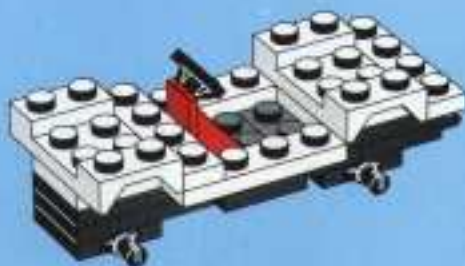



8



 
9

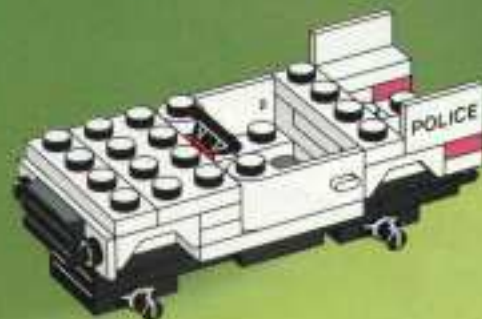


10

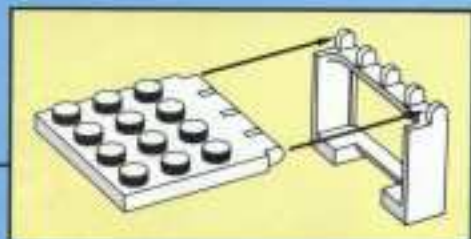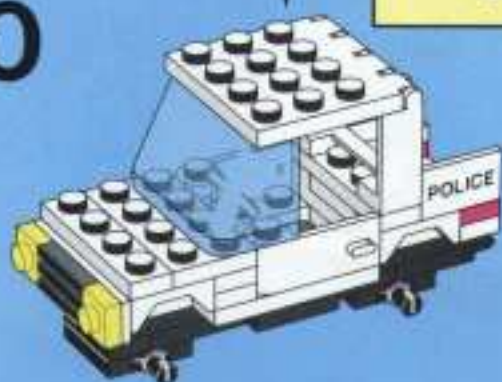  

11

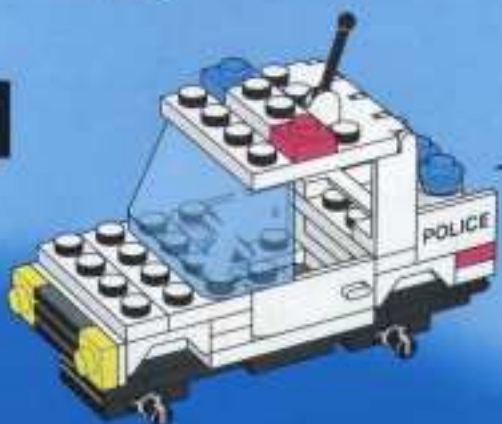 

12

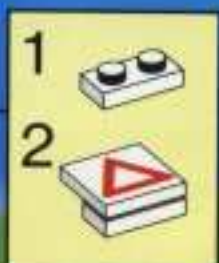 

1



2



 
3




4



5

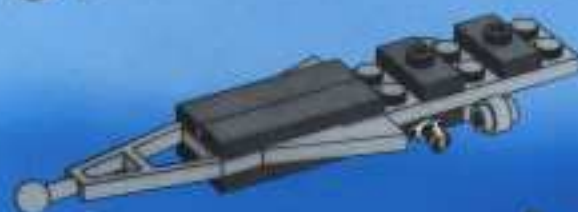

6

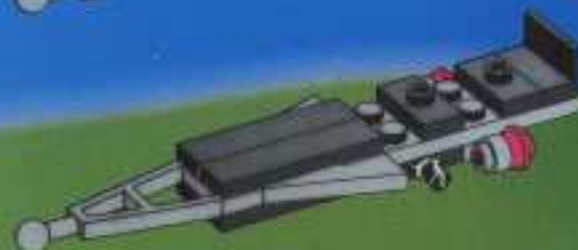 

7



1



2



3



 
4

 
 
 


5





6

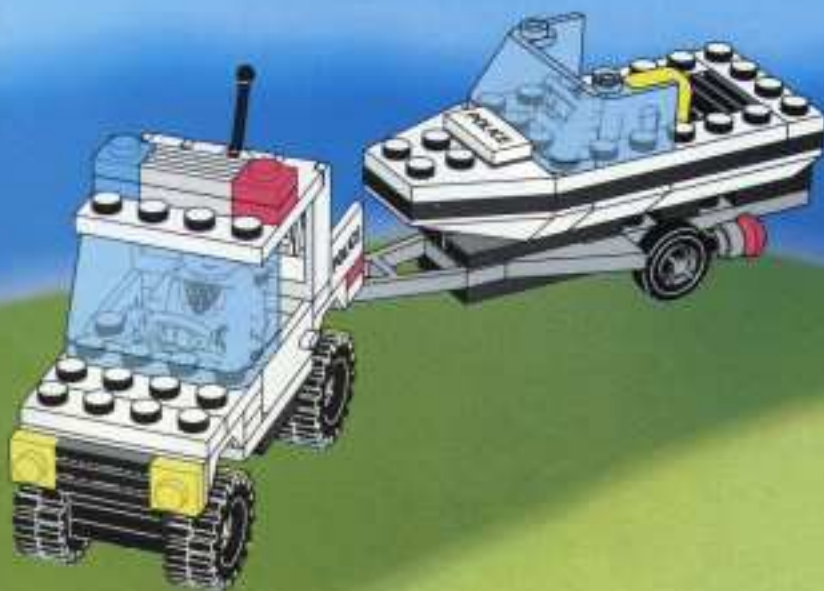

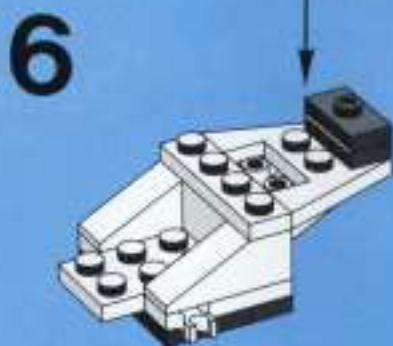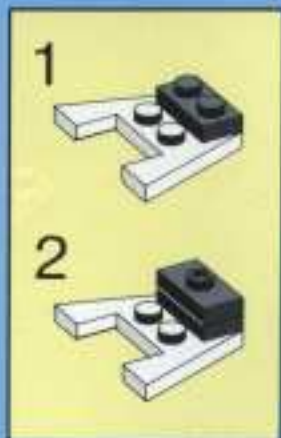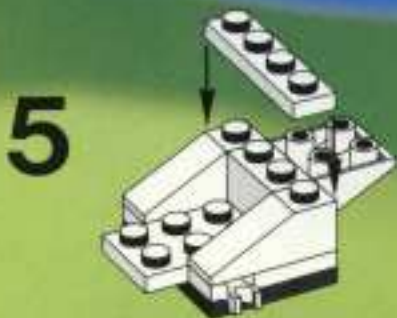

8

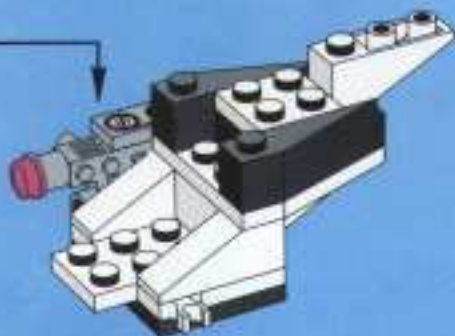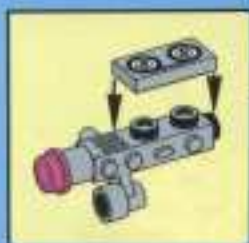  


1





2



 
9

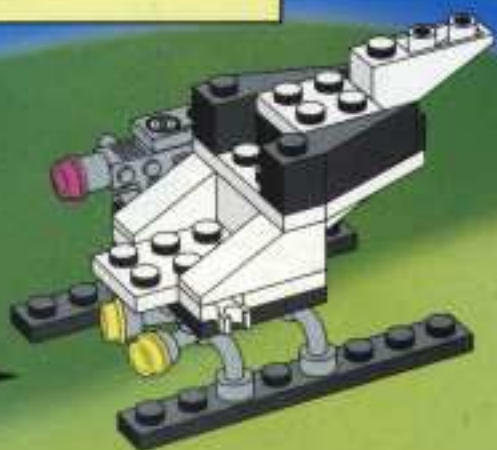


10

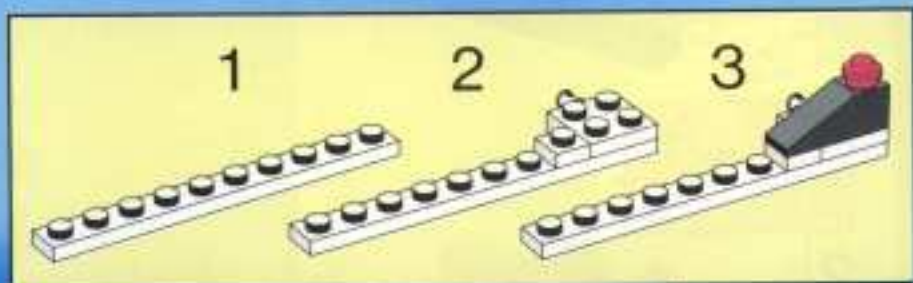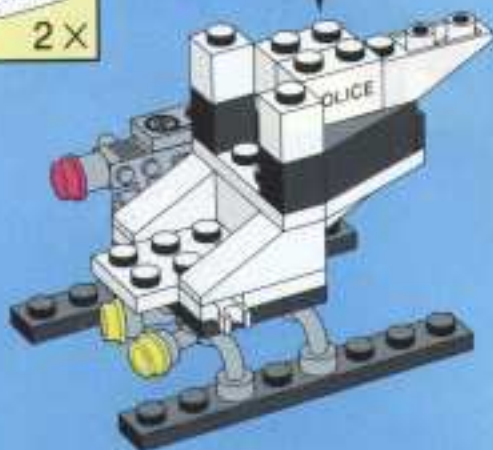  


11

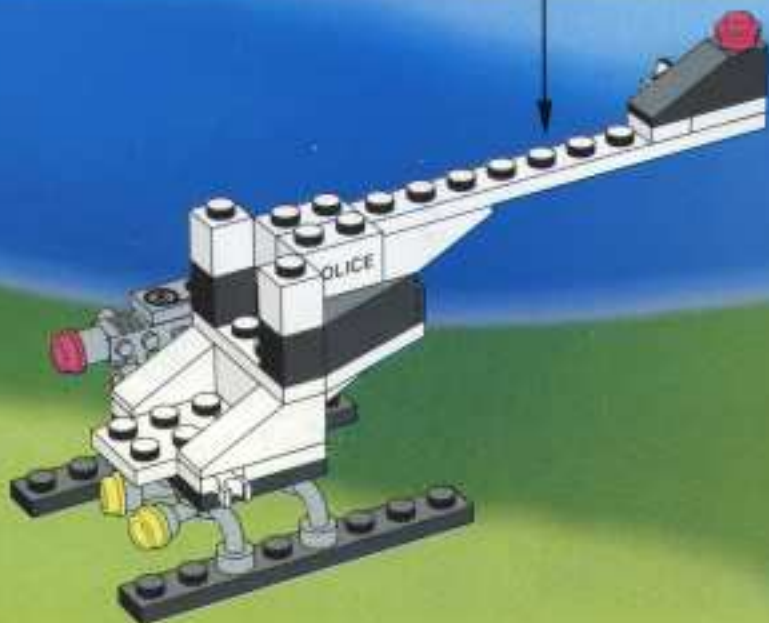 


12

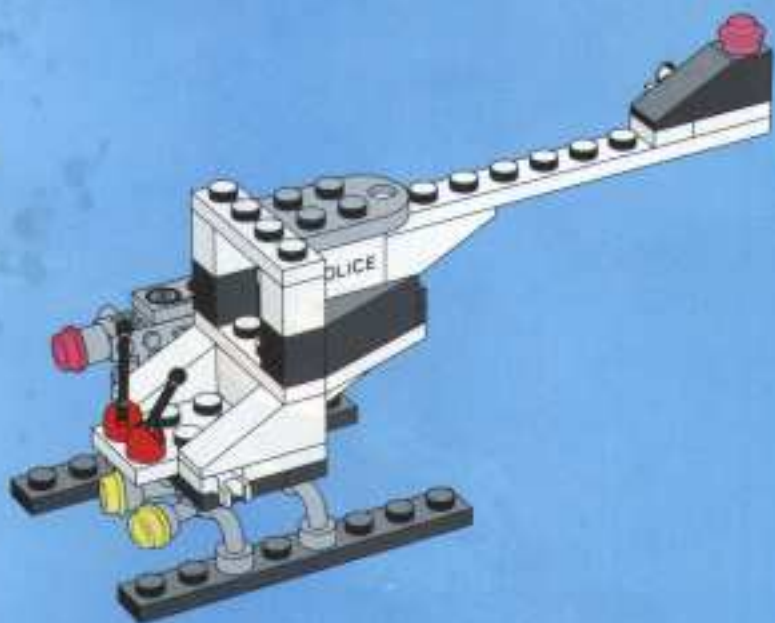 

13

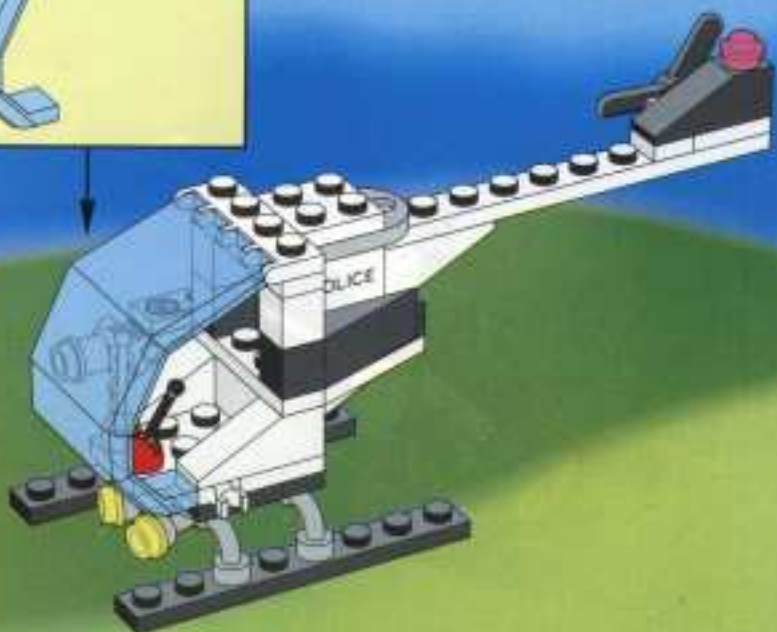 

14

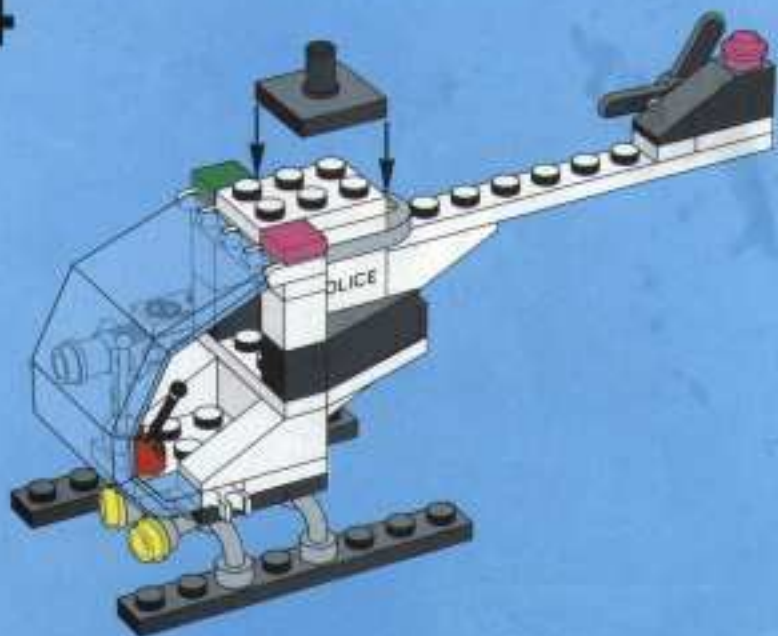 

15

