

6379

LEGOLAND®

LEGO



120408

 
1



2




3

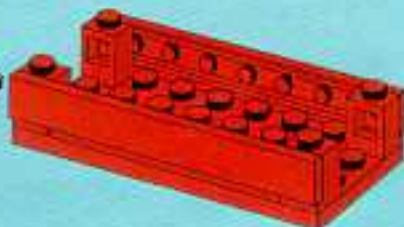

4



 
5

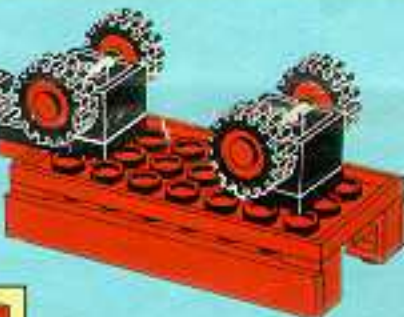

6



 7

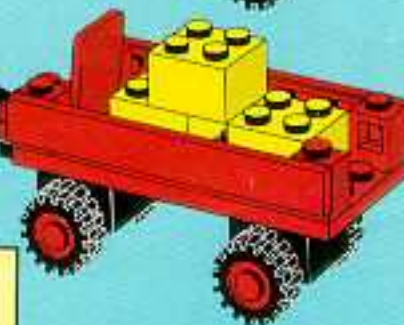

1

 
 


2




3




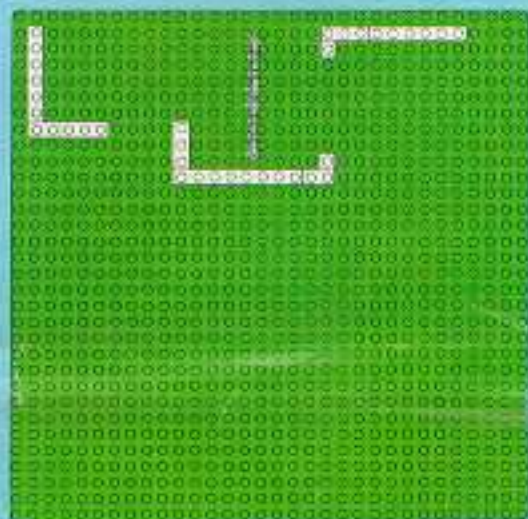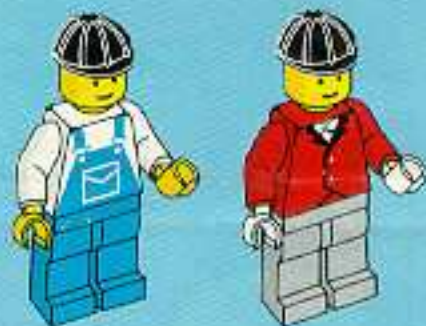


1

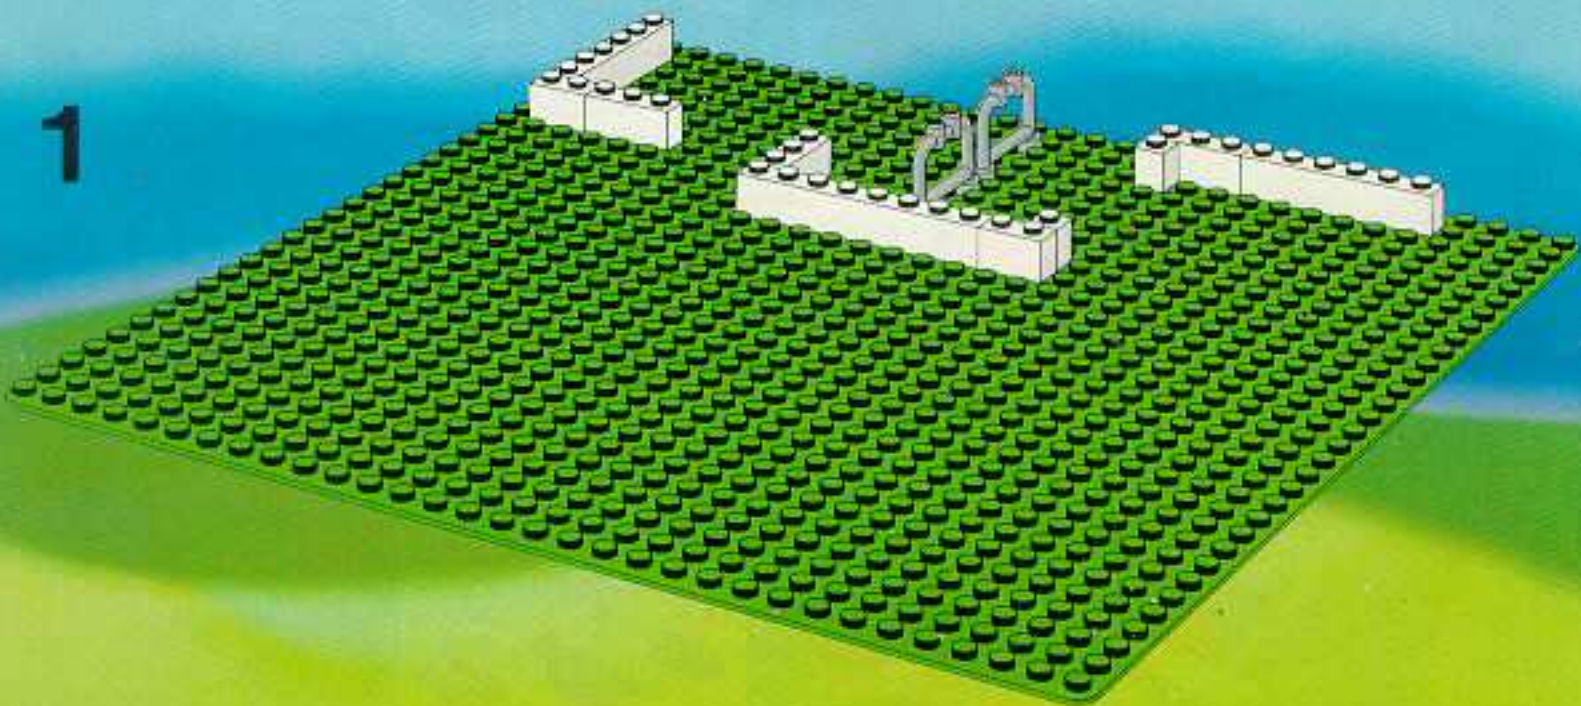 


2

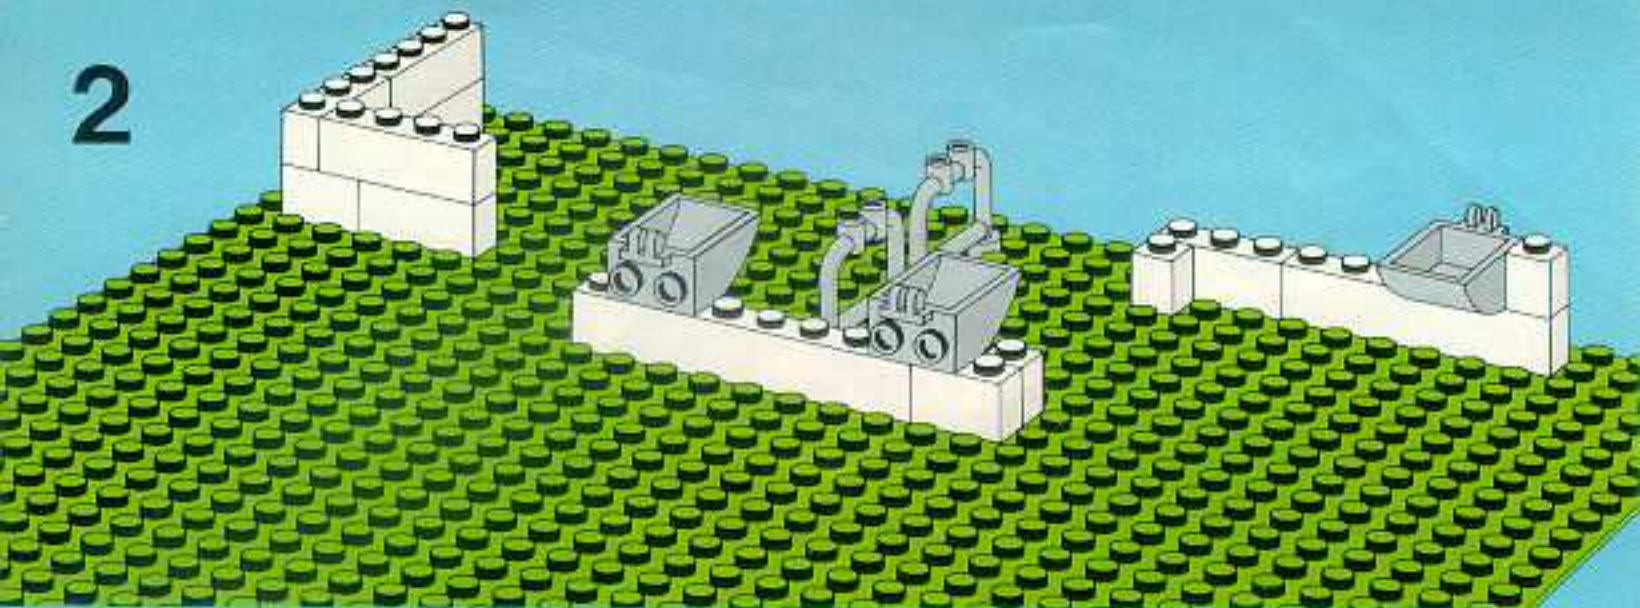 



3

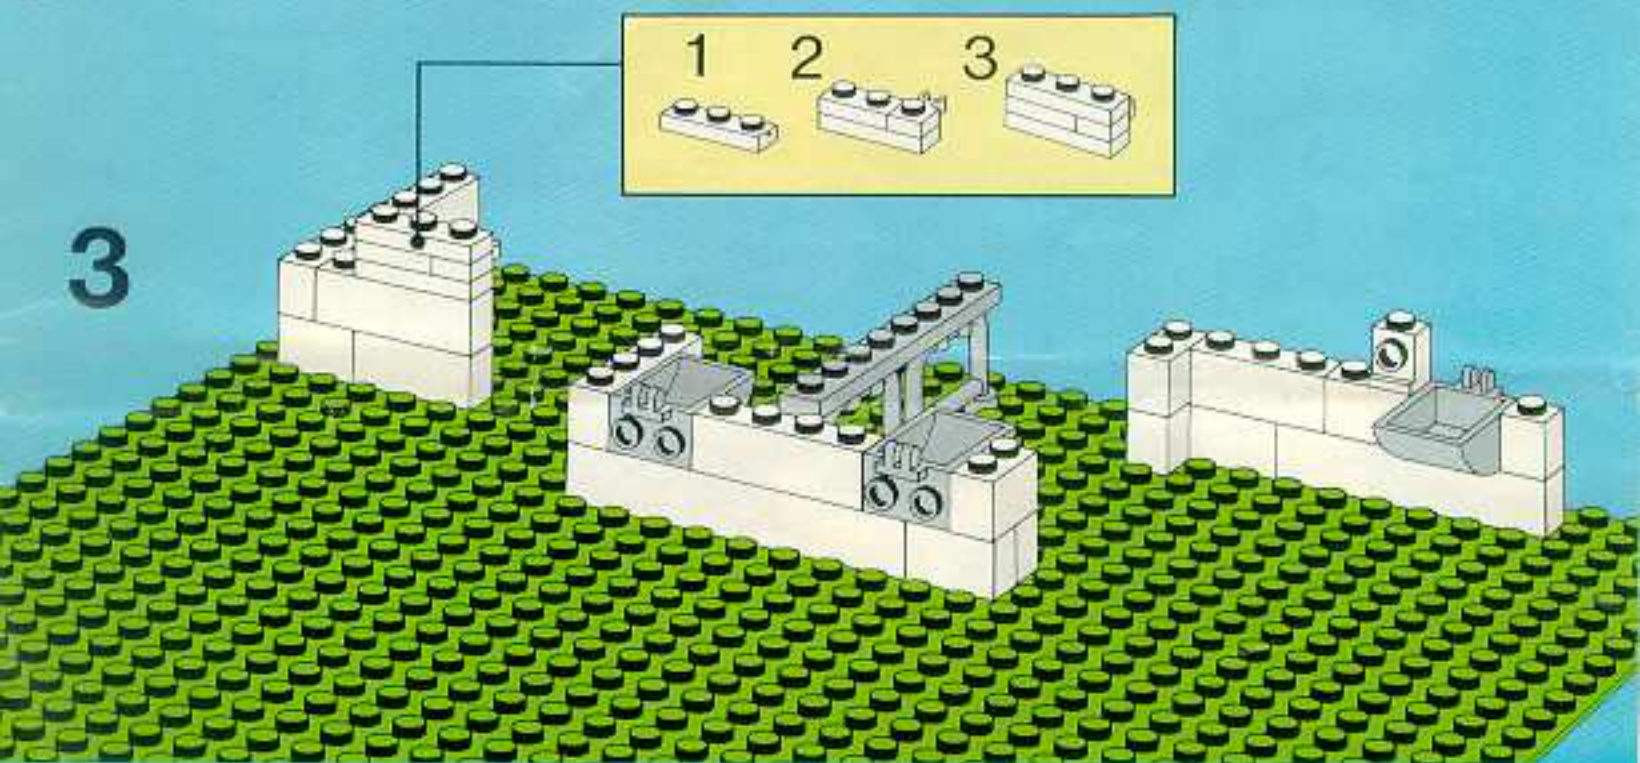 


4

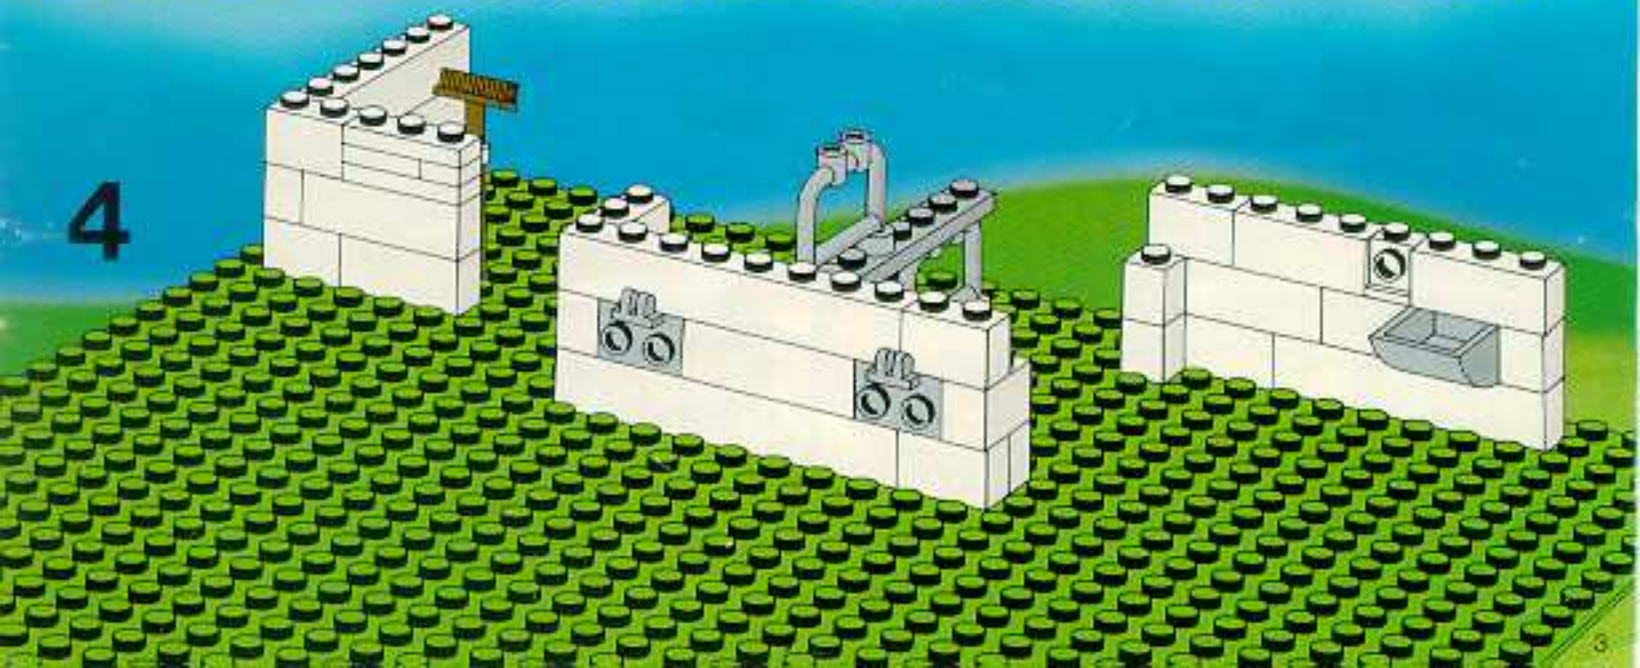 


5

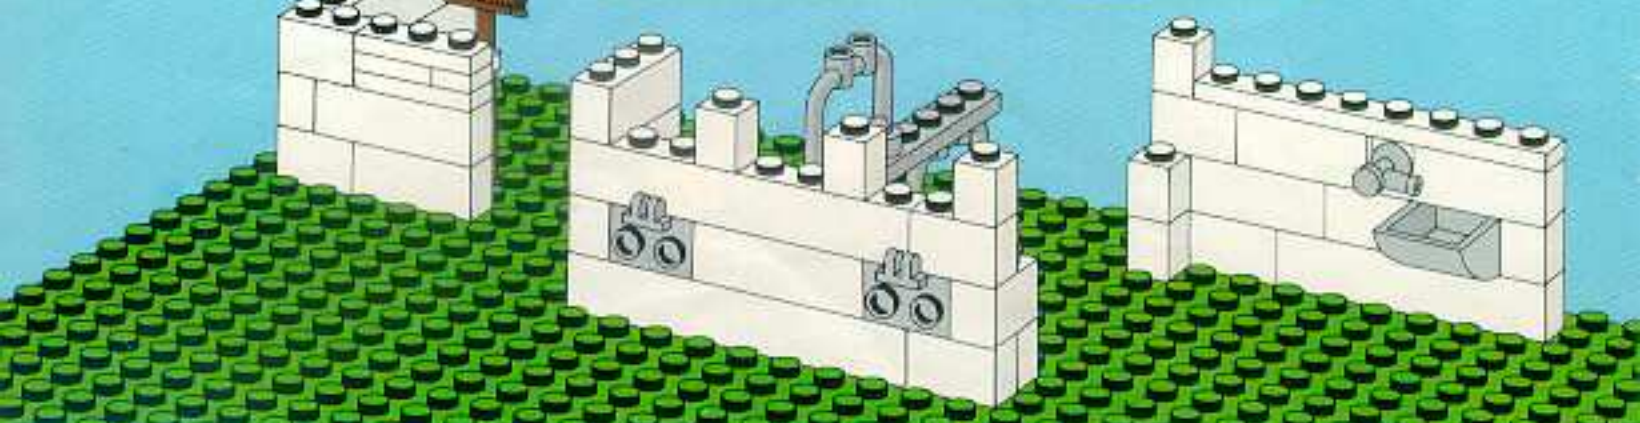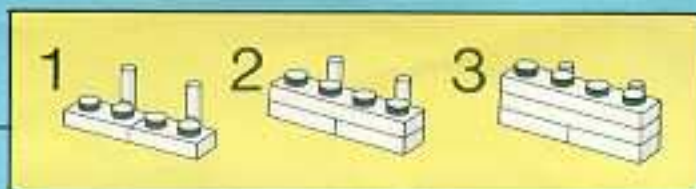  


6

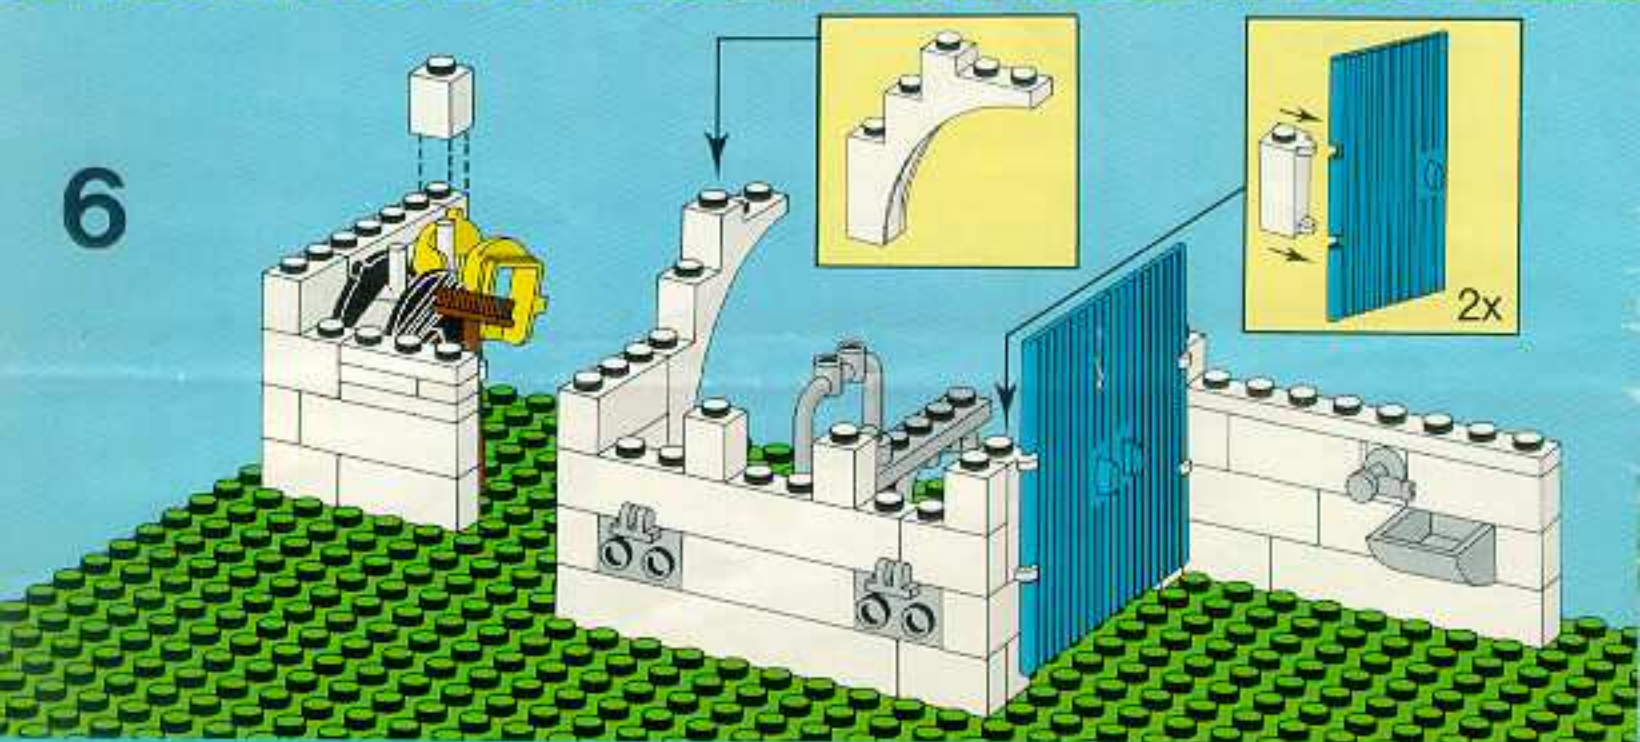 


7

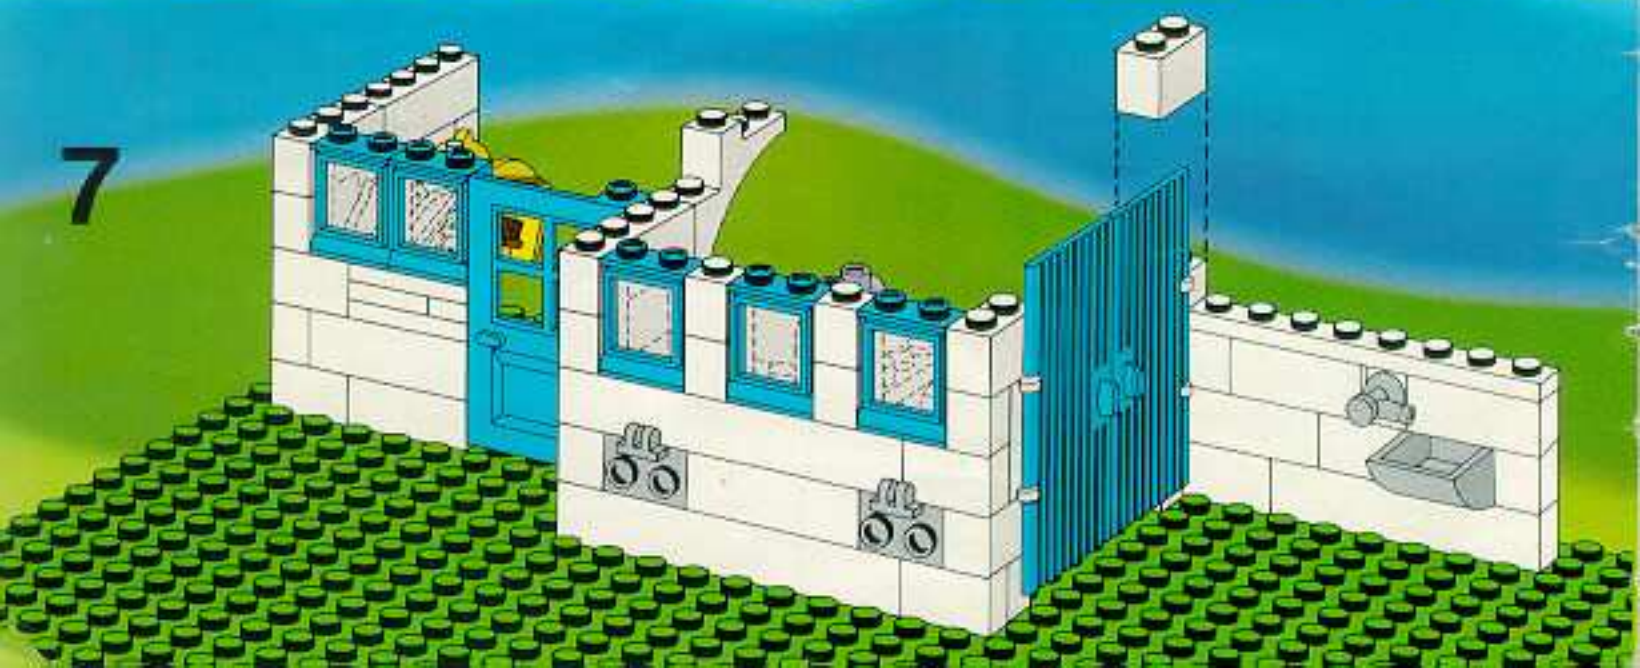 


8

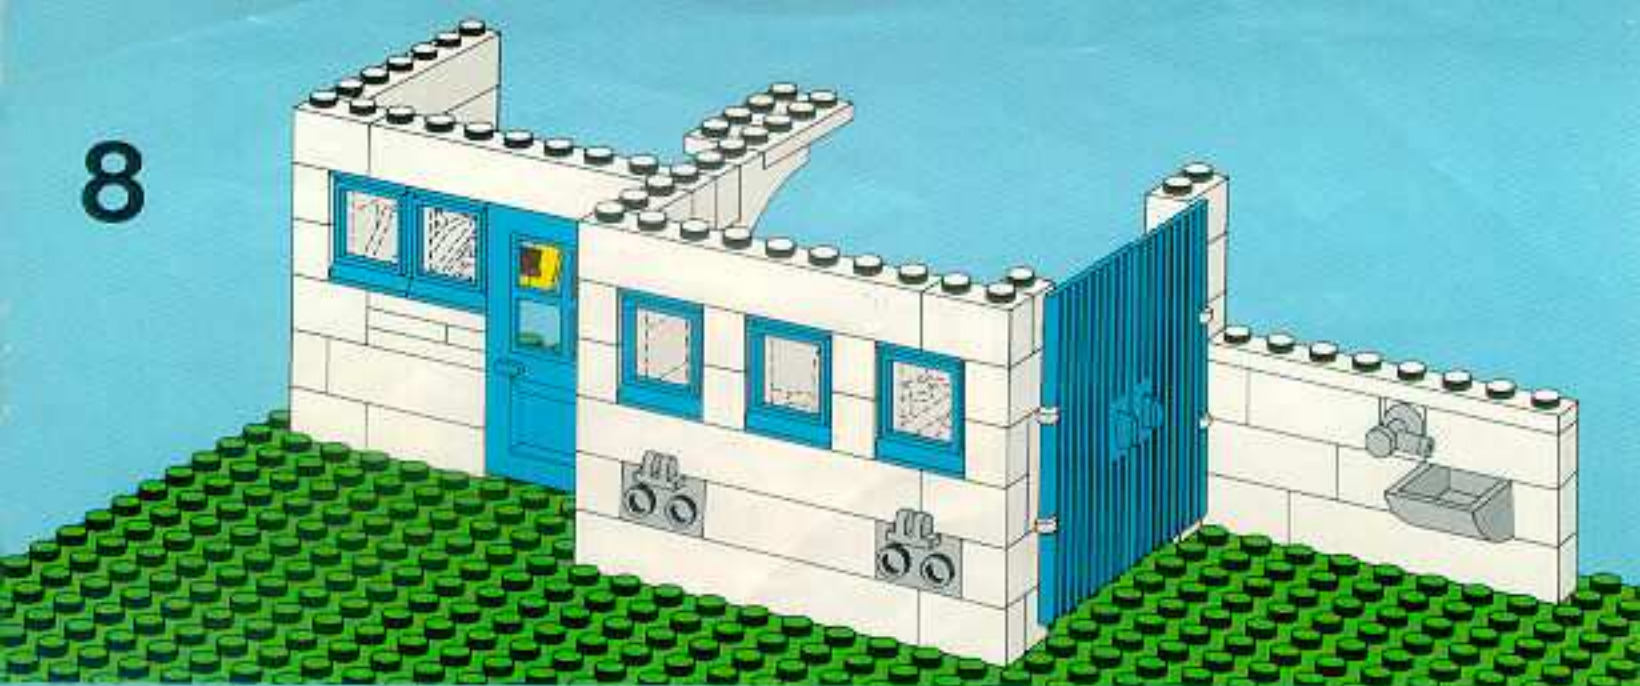 


9

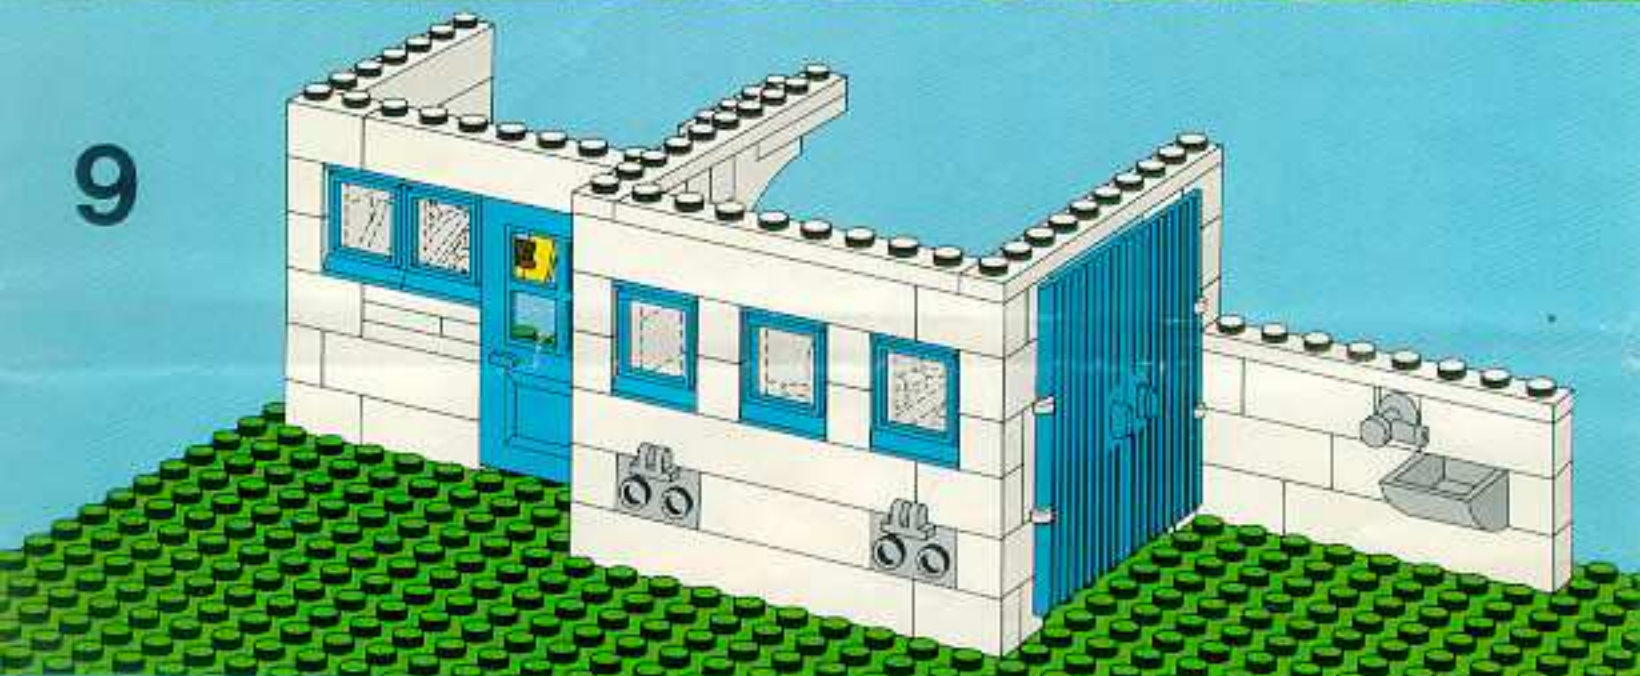 


10

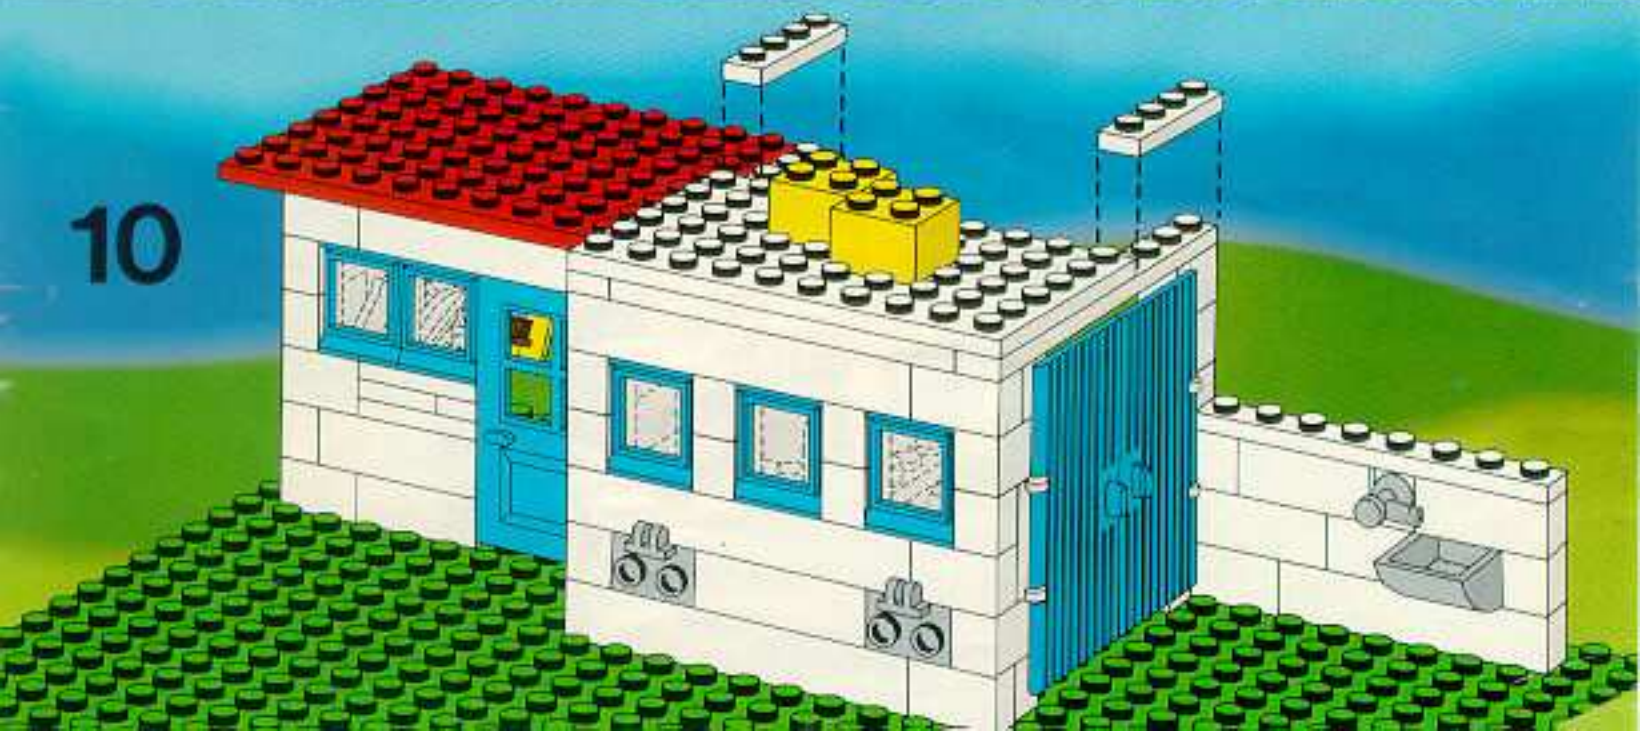 


11

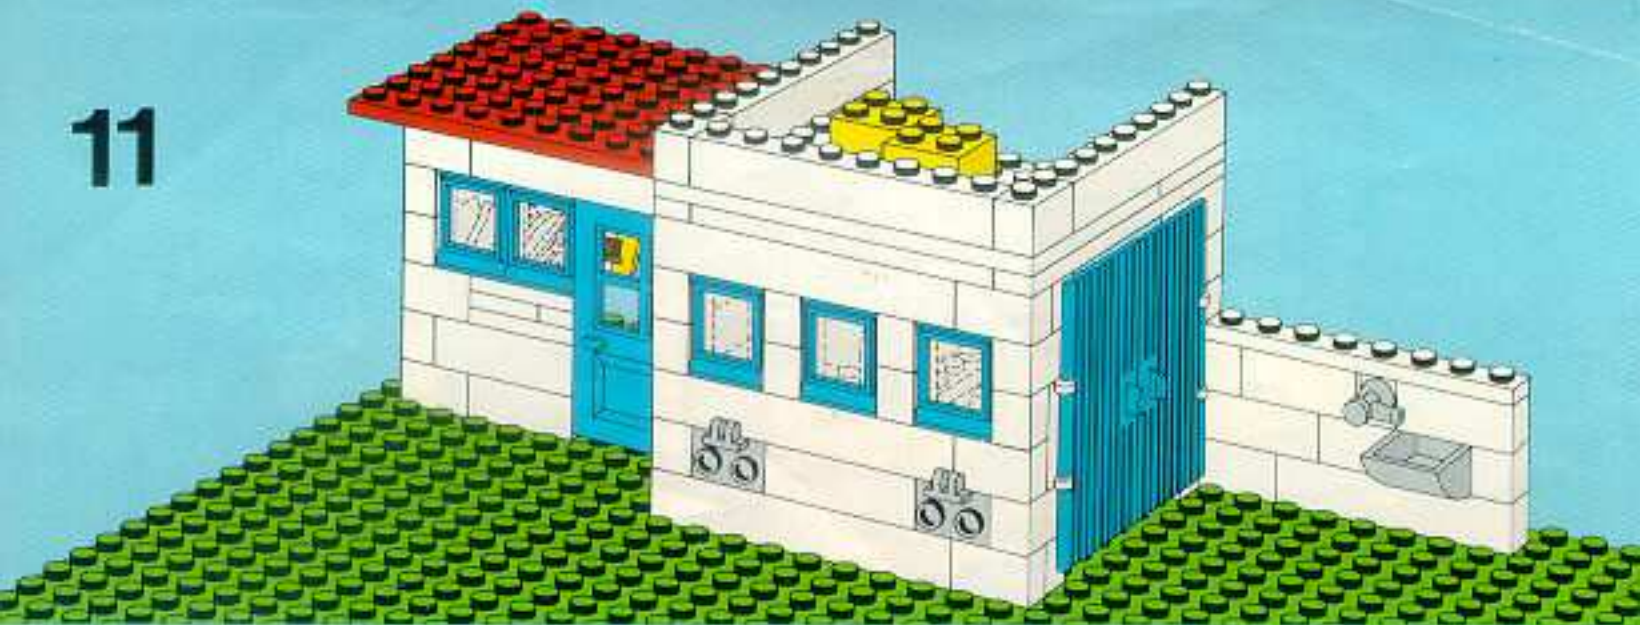 


12

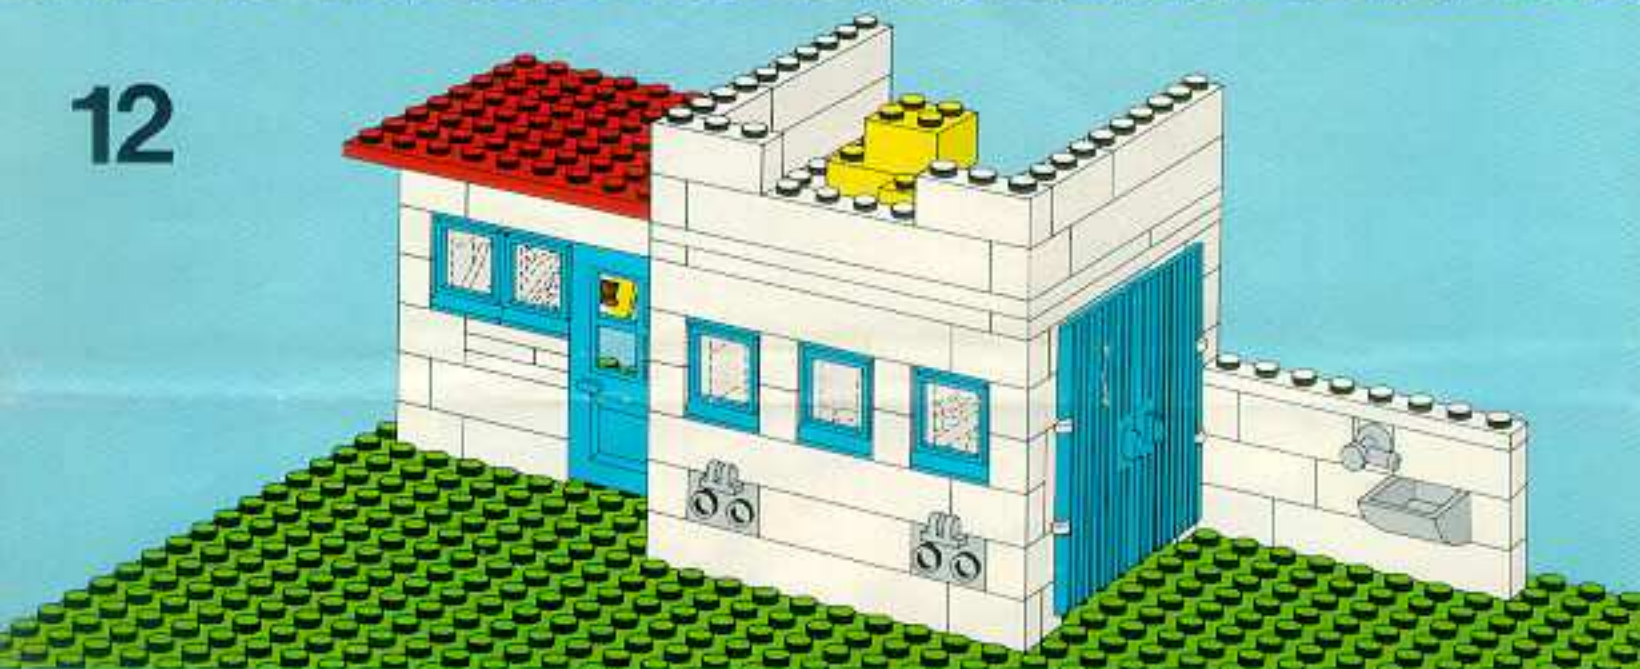 


13

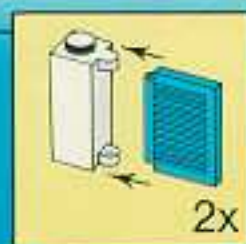 



14

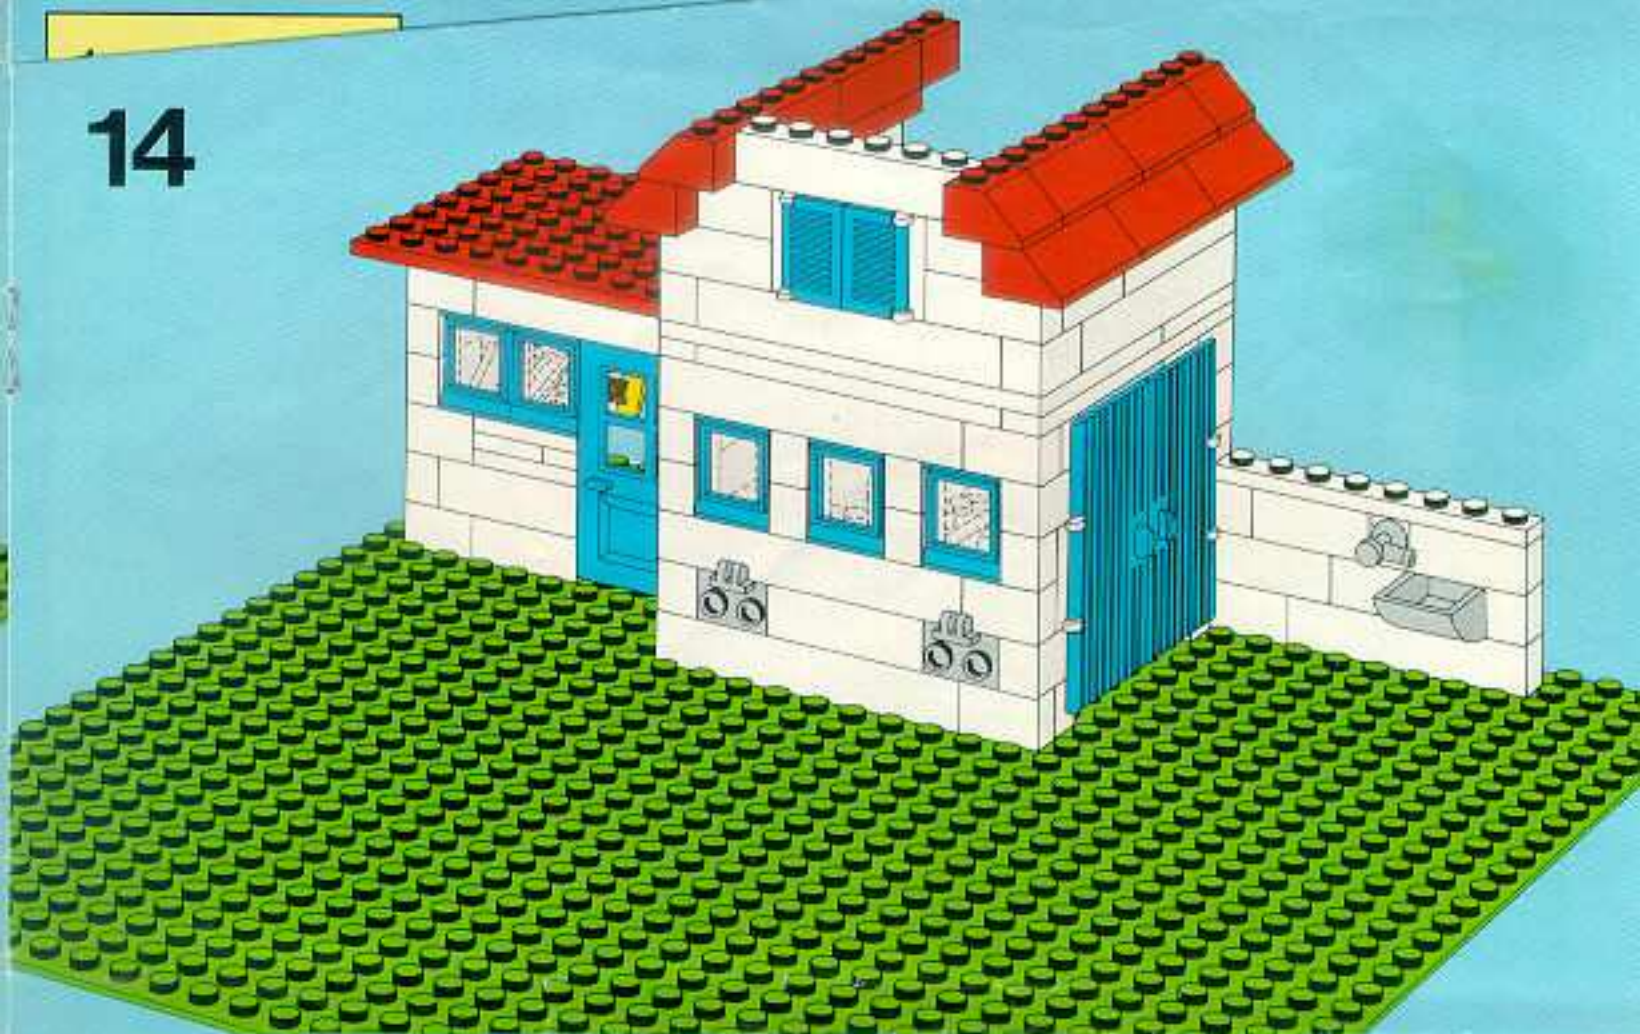 




15

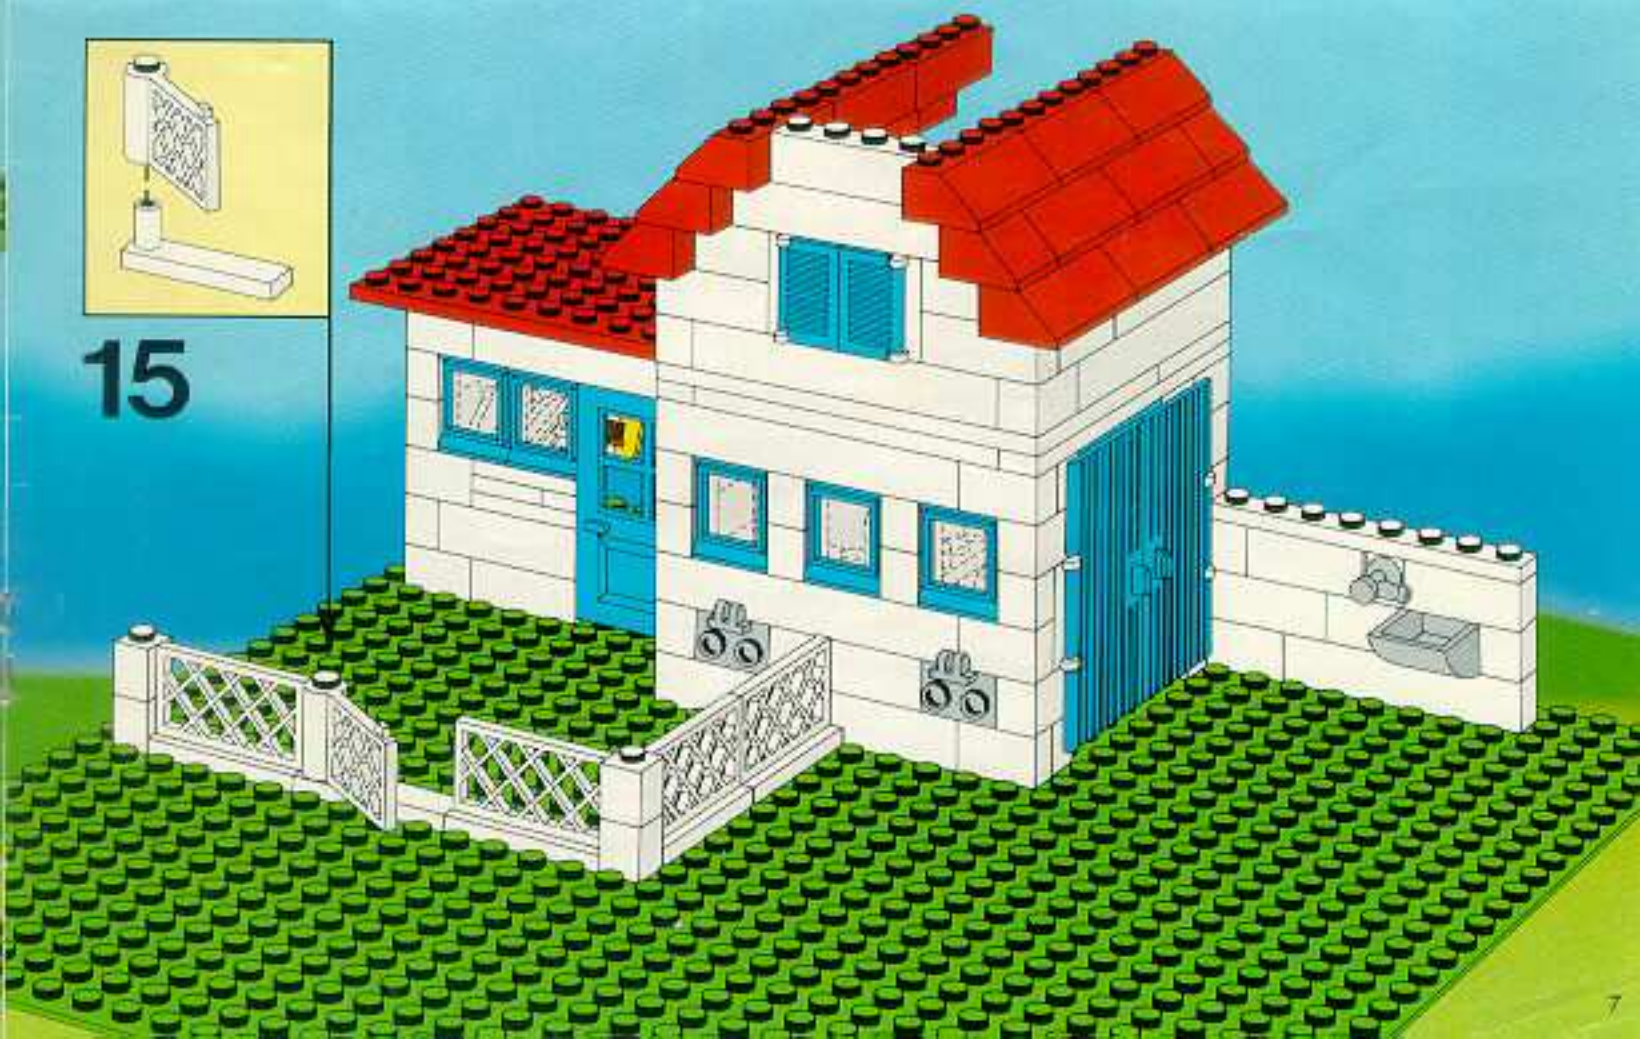 

16

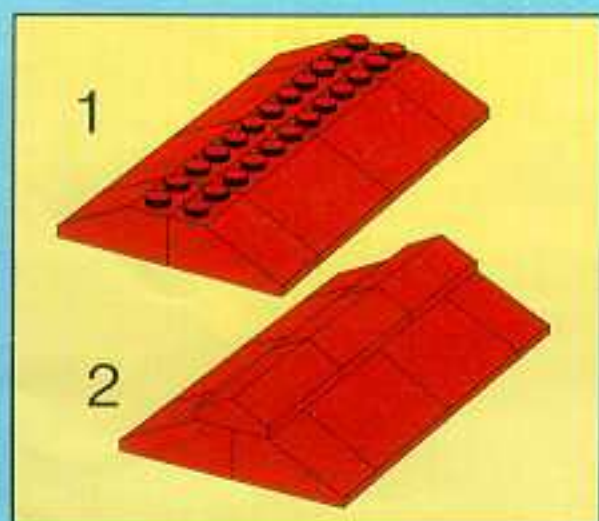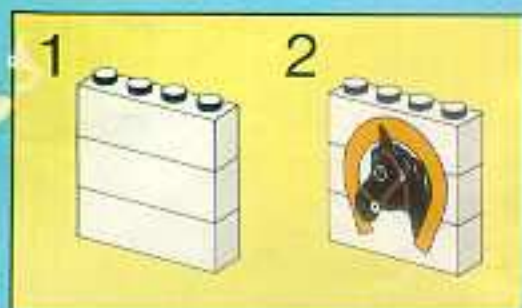  

17

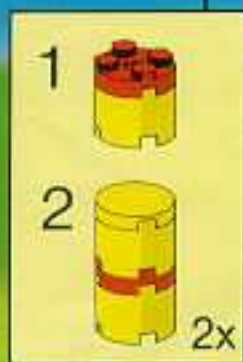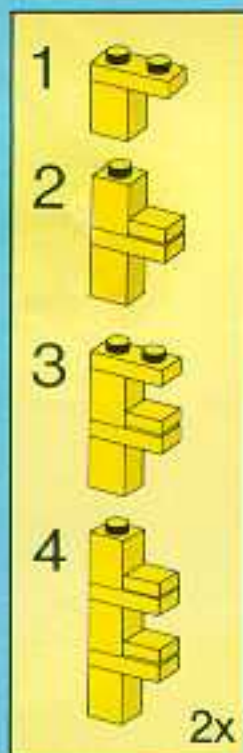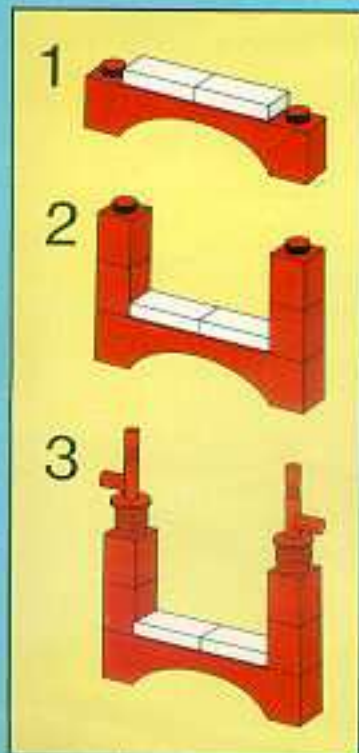   

18

