



NEW COMPONENT LIST

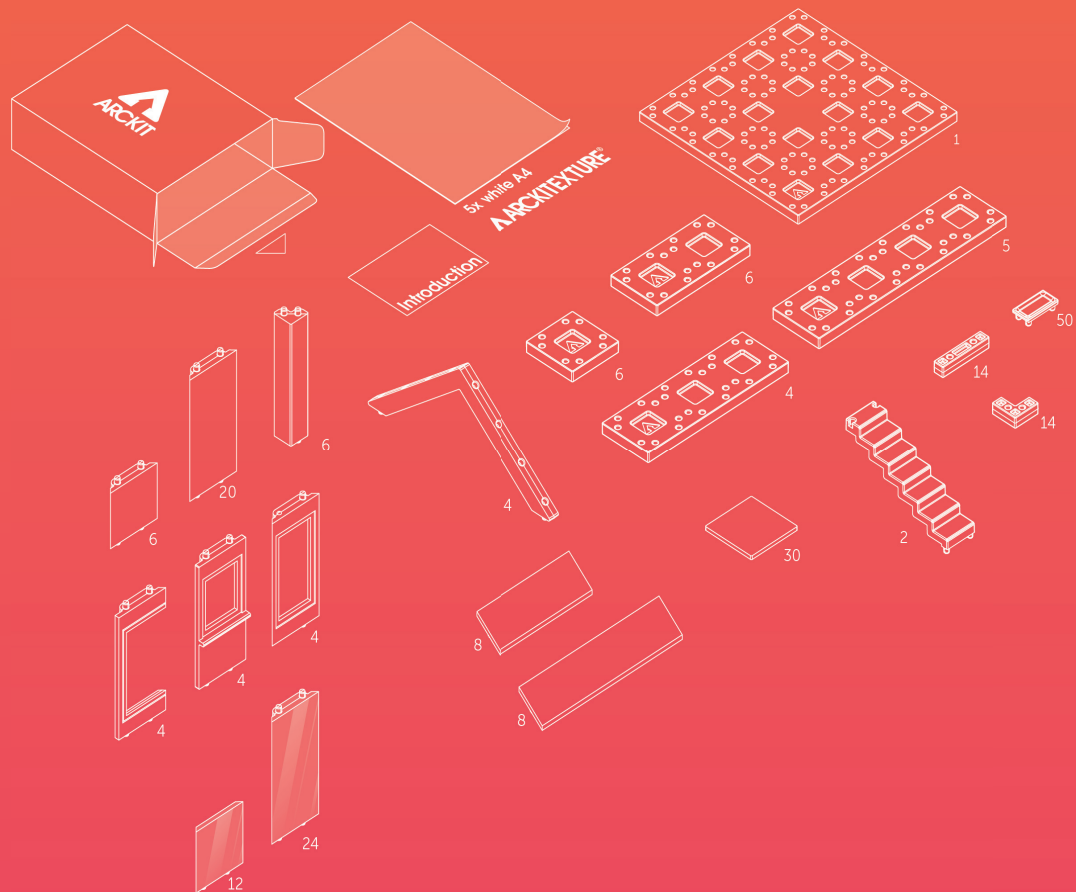


03

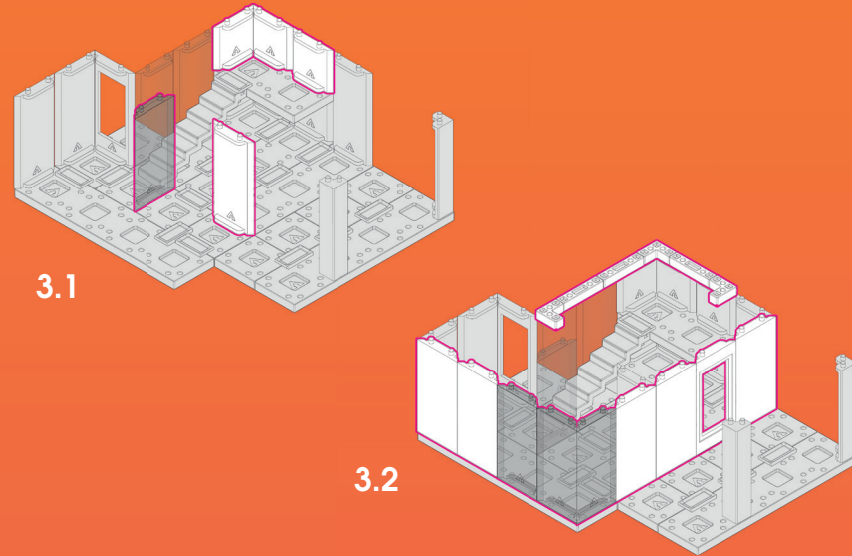


04


Make sure to align walls before loosely applying floor panel on top. Take you time to insert the wall pegs into the correct floor panel holes. Once pegs and holes are aligned, take the model in your hands and squeeze around the perimeter to fully secure the floors and the walls.

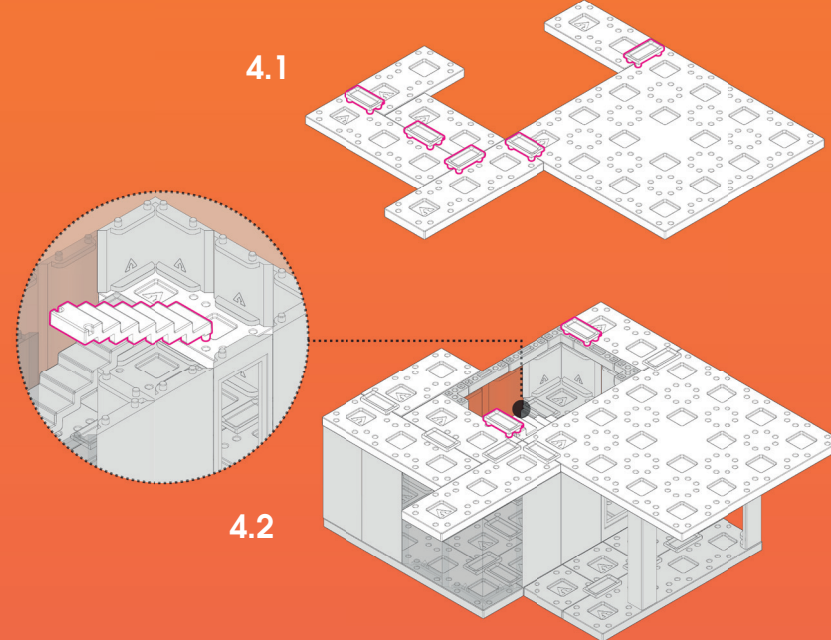


05

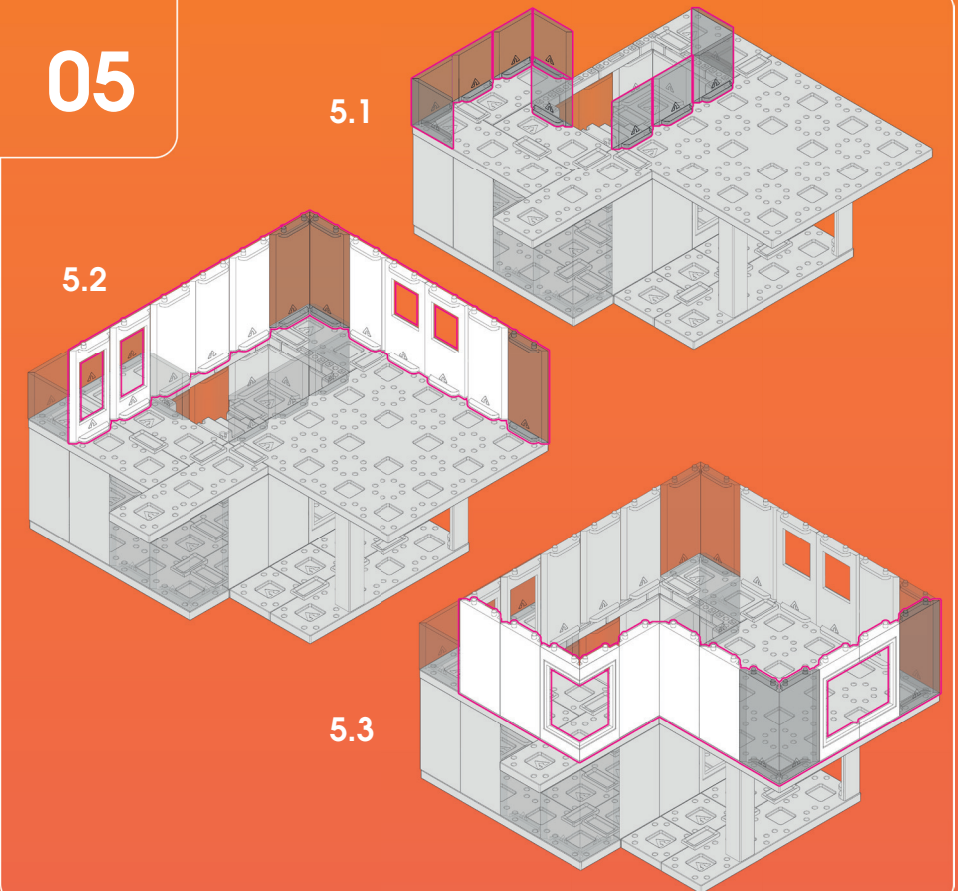


06

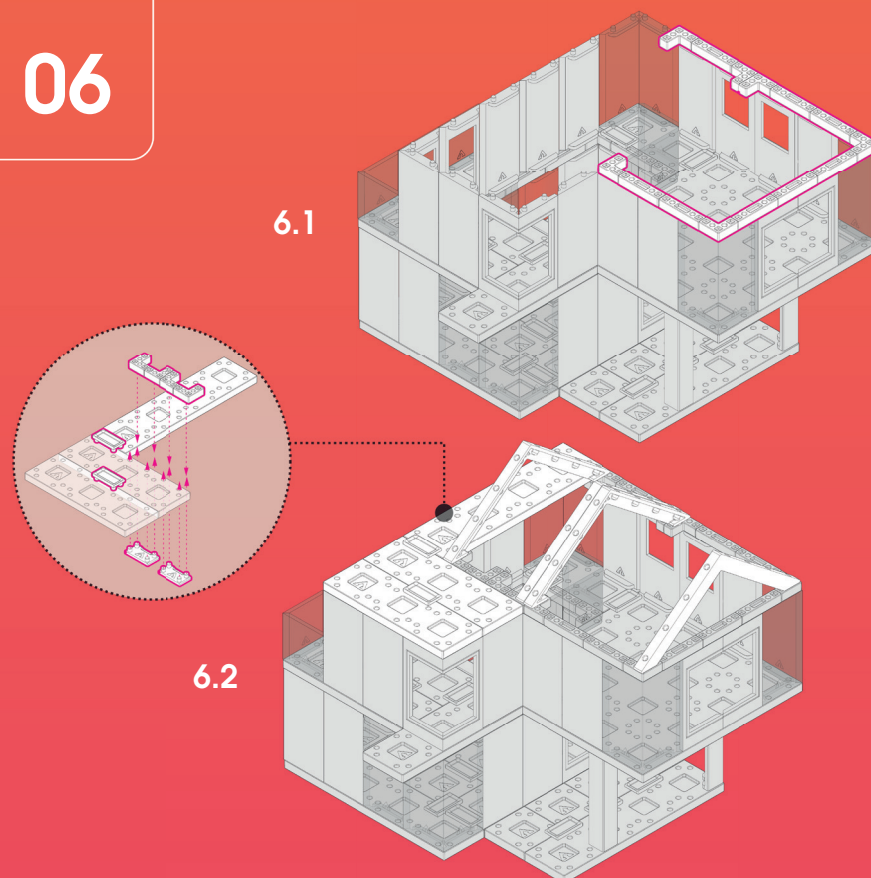

07

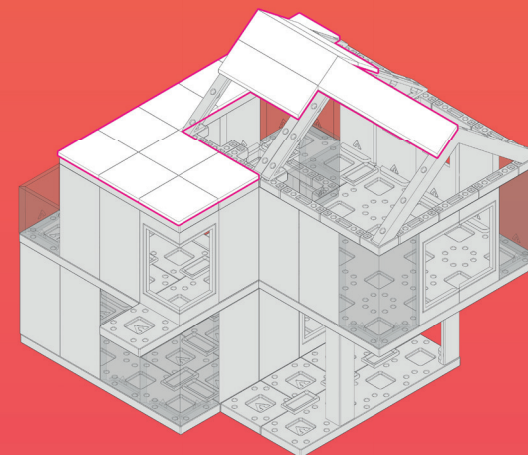

08

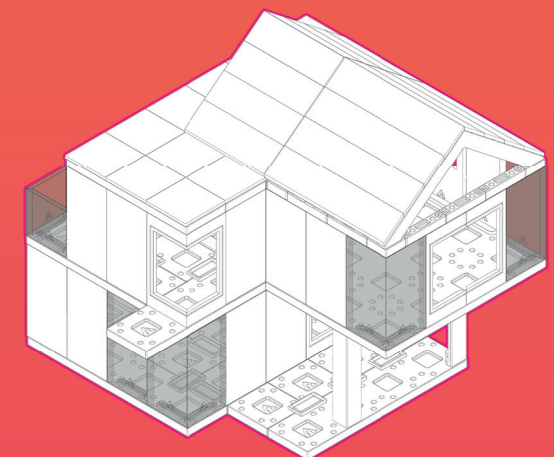

Share your amazing builds with the world and make sure to hashtag **#arckitlovers** in your posts. You can also send your pictures to info@arckit.com and we might even publish what you have built on our online gallery.

Now, what will you build next?